




6. Position the carpet to access the seatbelt anchor and pretensioner.
1. Remove the pin-type retainer.
 2. Position the carpet.

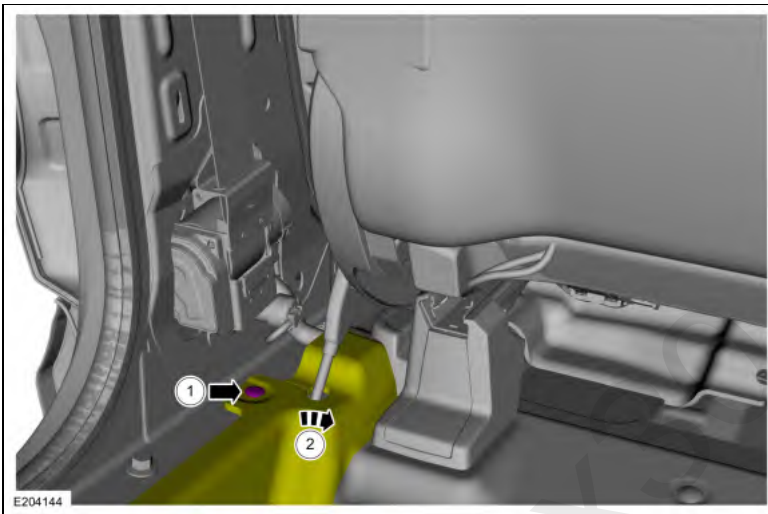

7. **NOTE:** Carpet shown removed for clarity.

- Position the seatbelt anchor and pretensioner.
1. Remove the bolt.
Torque: 30 lb.ft (40 Nm)
 2. Position the anchor to access the electrical connector.
 3. Disconnect the electrical connector.