

Rear Seatbelt Retractor and Pretensioner

Removal

⚠️**WARNING:** The following procedure prescribes critical repair steps required for correct restraint system operation during a crash. Follow all notes and steps carefully. Failure to follow step instructions may result in incorrect operation of the restraint system and increases the risk of serious personal injury or death in a crash.


NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH shown, RH similar.


- 1. ⚠️**WARNING:** Before beginning any service procedure in this manual, refer to health and safety warnings in section 100-00 General Information. Failure to follow this instruction may result in serious personal injury.

Refer to: Pyrotechnic Device Health and Safety Precautions (100-00 General Information, Description and Operation).


- 2. Depower the SRS.
Refer to: Supplemental Restraint System (SRS) Depowering (501-20B Supplemental Restraint System, General Procedures).
- 3. Remove the loadspace trim panel.
Refer to: Loadspace Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
- 4. Remove the bolt and position the safety belt aside.
Torque: 35 lb.ft (47.5 Nm)

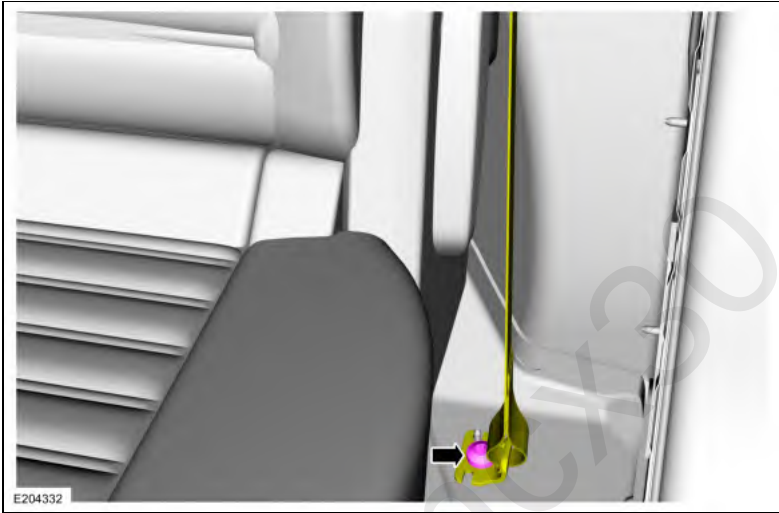

- 5. Release the clips and remove the D-ring bolt cover.

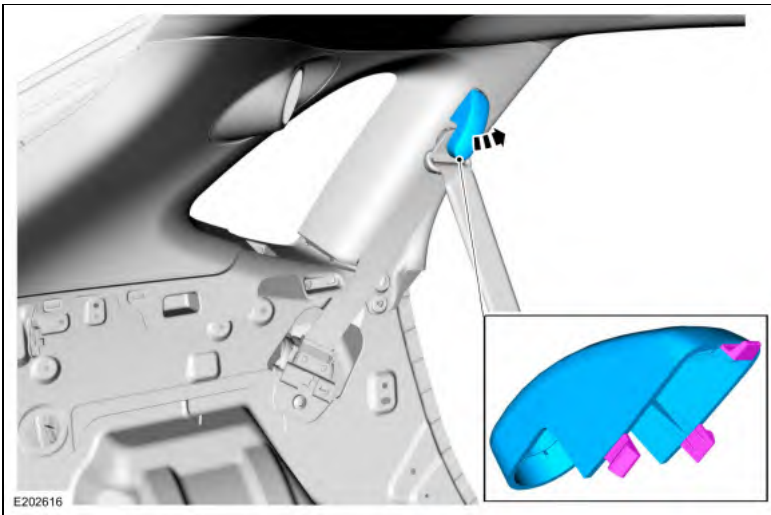

6. Remove the bolt and the safety belt retractor.
Torque: 30 lb.ft (40 Nm)

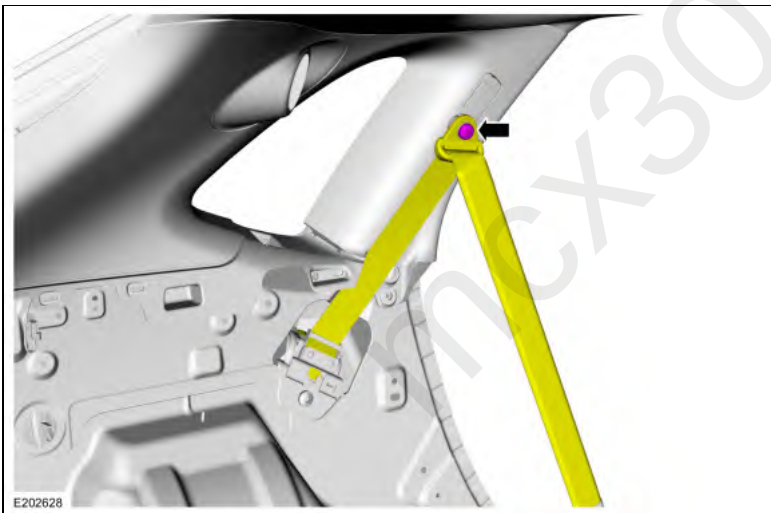

7. Remove the rear seatbelt retractor and pretensioner.
1. Remove the bolt.
Torque: 30 lb.ft (40 Nm)
 2. Remove the bolt.
Torque: 106 lb.in (12 Nm)
 3. Disconnect the electrical connector.
 4. Remove the D-ring bolt and the rear seatbelt retractor and pretensioner.
Torque: 30 lb.ft (40 Nm)