


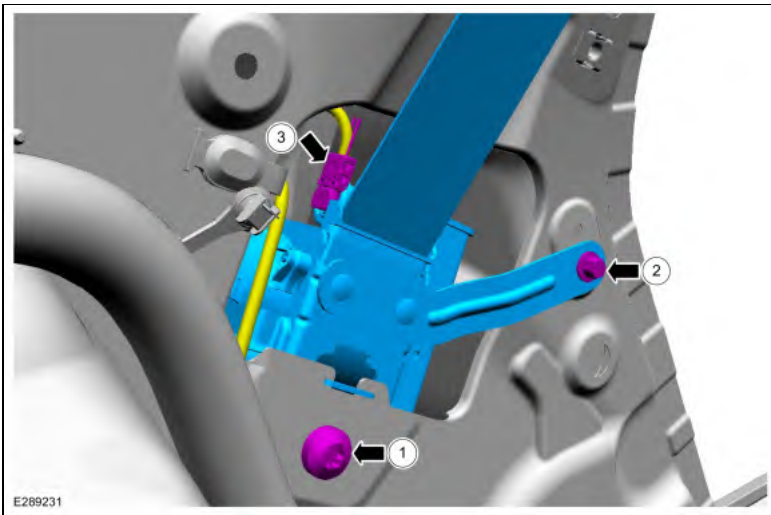

Installation

⚠ **WARNING:** Incorrect repair techniques or actions can cause an accidental Supplemental Restraint System deployment. Make sure the restraint system is depowered before reconnecting the component. Refer to the Supplemental Restraint System depowering General Procedure in section 501-20B. Failure to precisely follow depowering instructions could result in serious personal injury from an accidental deployment.

NOTE: During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

1. To install, reverse the removal procedure.
2. Repower the SRS.
Refer to: Supplemental Restraint System (SRS) Repowering (501-20B Supplemental Restraint System, General Procedures).
3. Check the seatbelt system for correct operation.
Refer to: Seatbelt Systems (501-20A Seatbelt Systems, Diagnosis and Testing).


Seatbelt Shoulder Height Adjuster

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH shown, RH similar.


1. Remove the B-pillar upper trim panel.
Refer to: B-Pillar Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
2.
Slide the height adjuster down to access the bolt.
 1. Pull the release latch.
 2. Slide the height adjuster down.

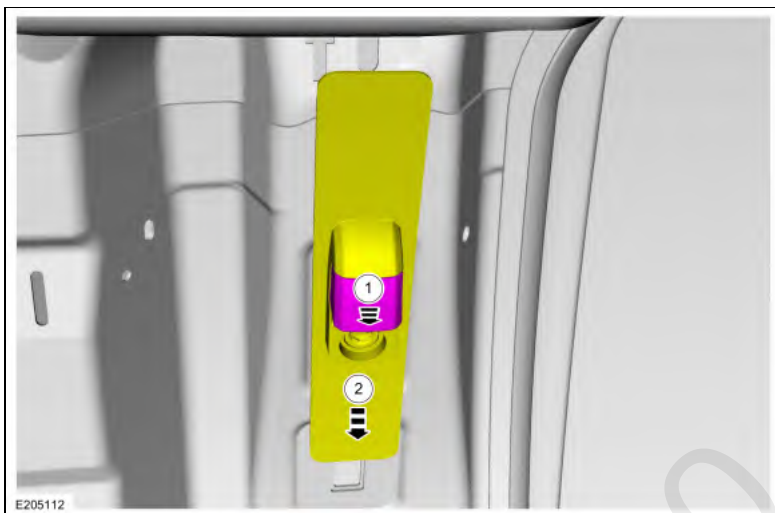

3.
Position the height adjuster.
 1. Remove the bolt.
Torque: 30 lb.ft (40 Nm)
 2. Rotate the height adjuster.

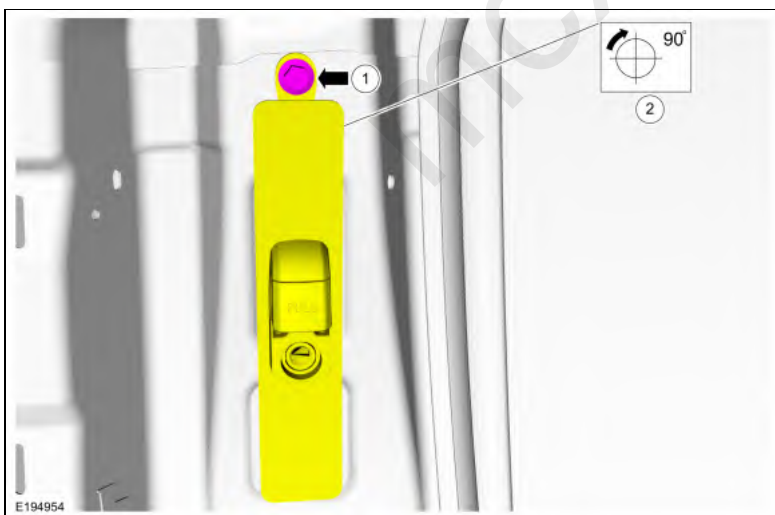

4. Detach the lower tab and remove the height adjuster.

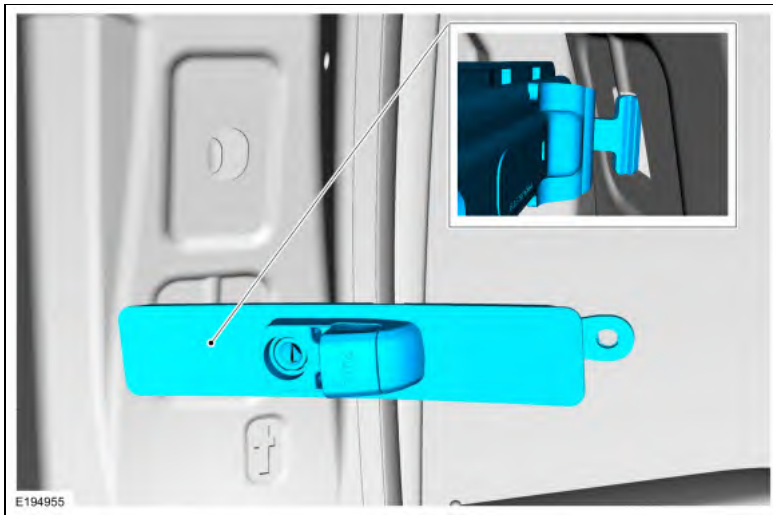

Installation

NOTE: During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

1. To install, reverse the removal procedure.
2. Check the seatbelt system for correct operation.
Refer to: Seatbelt Systems (501-20A Seatbelt Systems, Diagnosis and Testing).

mcx30.com