



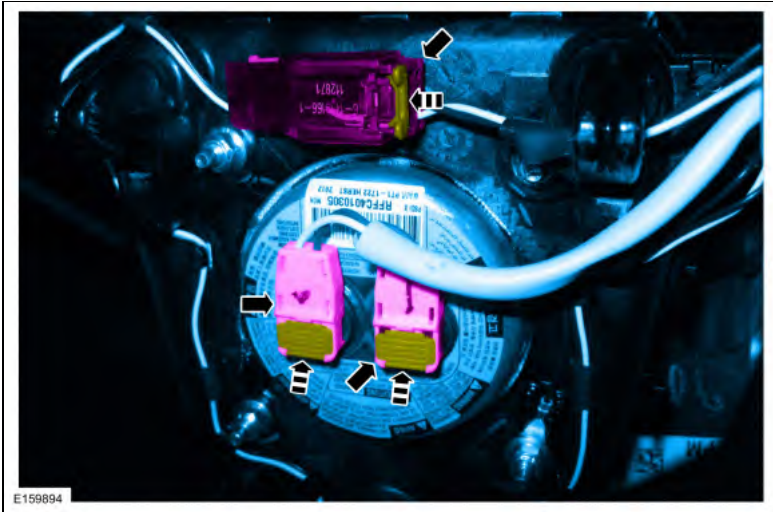

2. Engage the 2 driver airbag retaining hooks to the steering wheel spring clips.

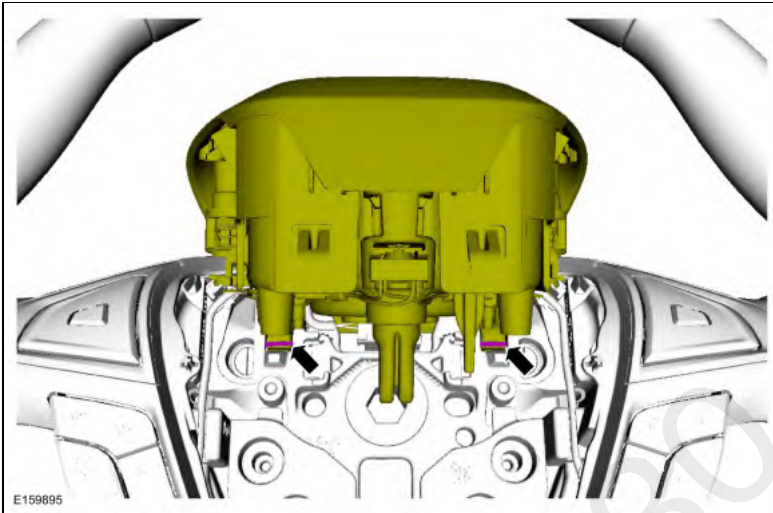

- 3.
1. Push down on the driver airbag.
 2. Pivot the driver airbag down and engage the lower retaining hook to the spring clip.



4. Repower the SRS.
Refer to: Supplemental Restraint System (SRS) Repowering (501-20B Supplemental Restraint System, General Procedures).


Driver Knee Airbag

Removal


WARNING: The following procedure prescribes critical repair steps required for correct restraint system operation during a crash. Follow all notes and steps carefully. Failure to follow step instructions may result in incorrect operation of the restraint system and increases the risk of serious personal injury or death in a crash.

NOTE: Removal steps in this procedure may contain installation details.


1. Depower the SRS.
Refer to: Supplemental Restraint System (SRS) Depowering (501-20B Supplemental Restraint System, General Procedures).
2. Open the stowage box and remove the retainers and the stowage box assembly.

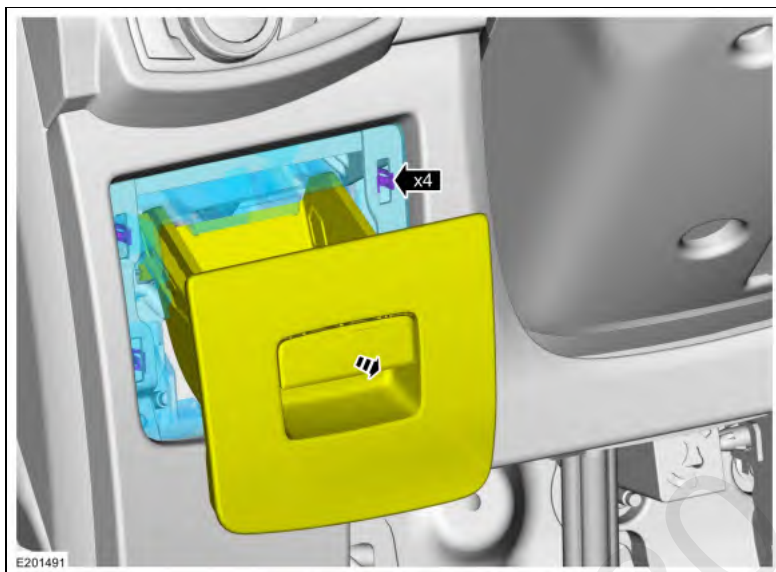

3. Remove the steering column opening trim panel.
 1. Remove the bolts.
 2. Release the clips and remove the steering column opening trim panel.
 3. Disconnect the in-vehicle temperature and humidity sensor.

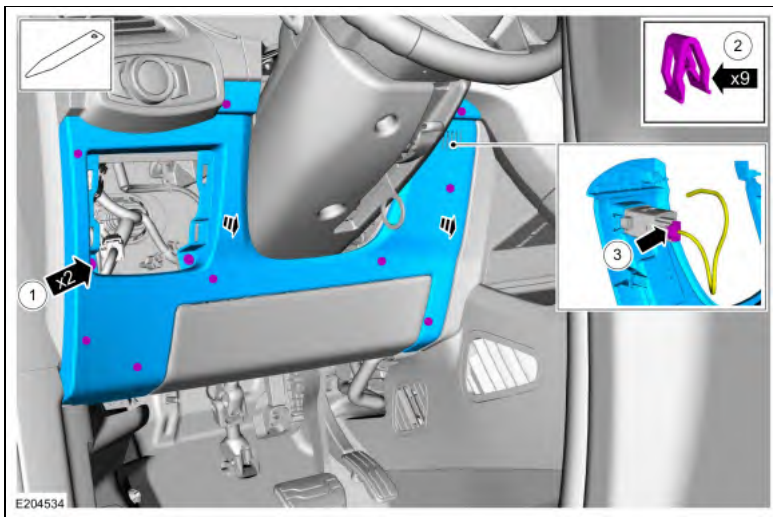

4. Remove the nuts.
Torque: 71 lb.in (8 Nm)

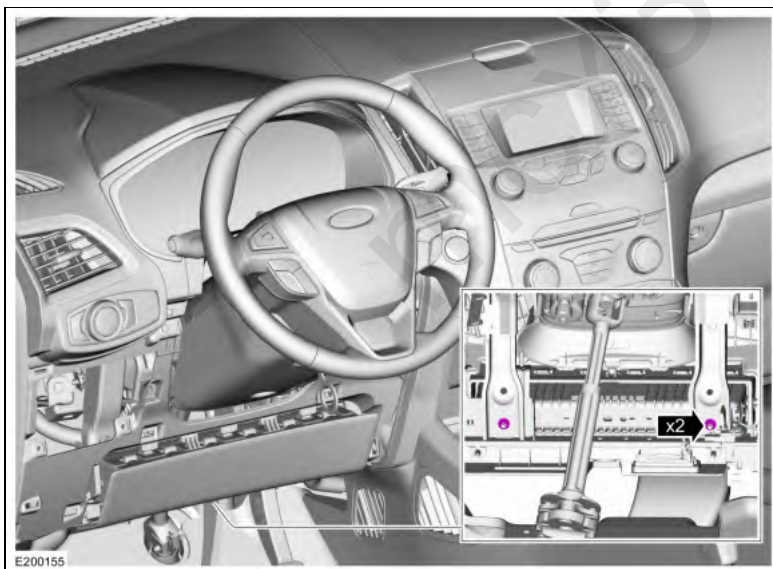

5.
 1. Through the opening, push the tabs down and detach the clips.
 2. Pivot the driver knee airbag down and separate it from the knee bolster.