



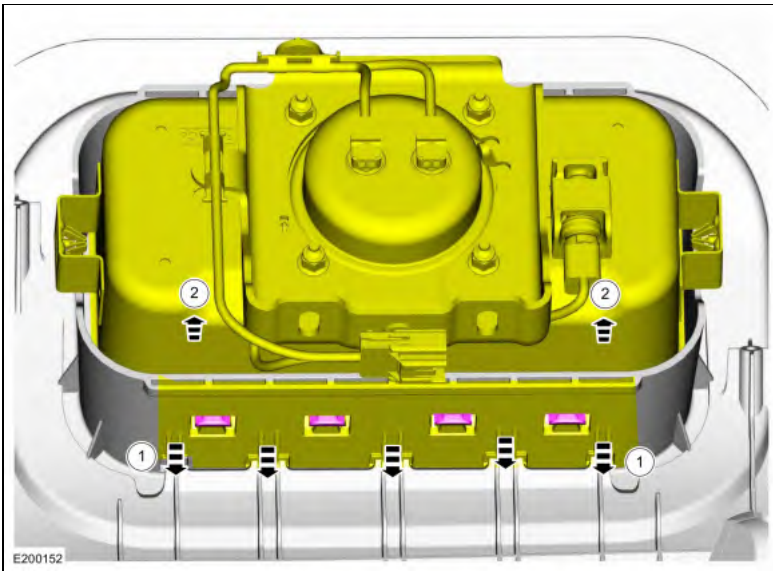

8. Continue to rotate the passenger airbag and remove it from the deployment chute.

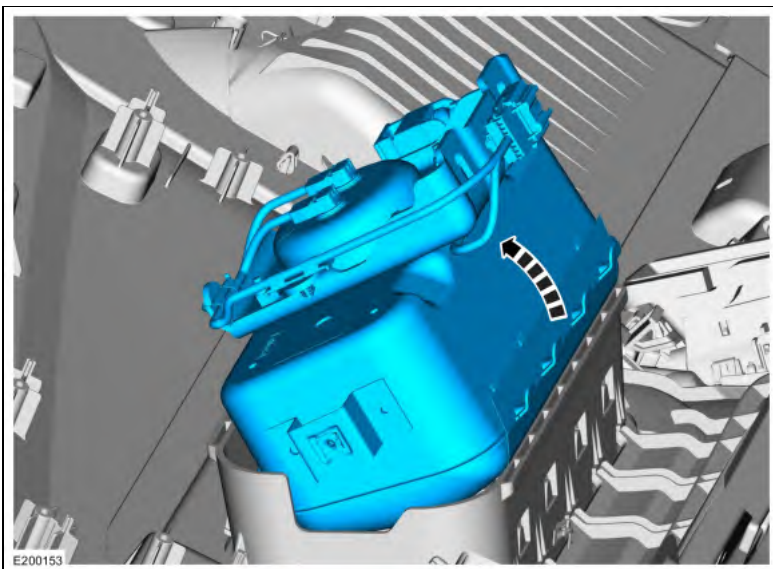

Installation


⚠ **WARNING:** Incorrect repair techniques or actions can cause an accidental Supplemental Restraint System deployment. Make sure the restraint system is depowered before reconnecting the component. Refer to the Supplemental Restraint System depowering General Procedure in section 501-20B. Failure to precisely follow depowering instructions could result in serious personal injury from an accidental deployment.

1. ⚠ **WARNING:** Before installing the passenger air bag module assembly:


- Inspect the passenger air bag module and instrument panel/deployment chute cavity for any damage or foreign material.
- Remove any foreign material from the passenger air bag module and instrument panel/deployment chute cavity.
- Install new parts if damaged.

Failure to follow these instructions may result in the passenger air bag deploying incorrectly, which increases the risk of serious personal injury or death in a crash.


1. Position the passenger airbag to the deployment chute.
2. Engage the passenger airbag retainers to the deployment chute.

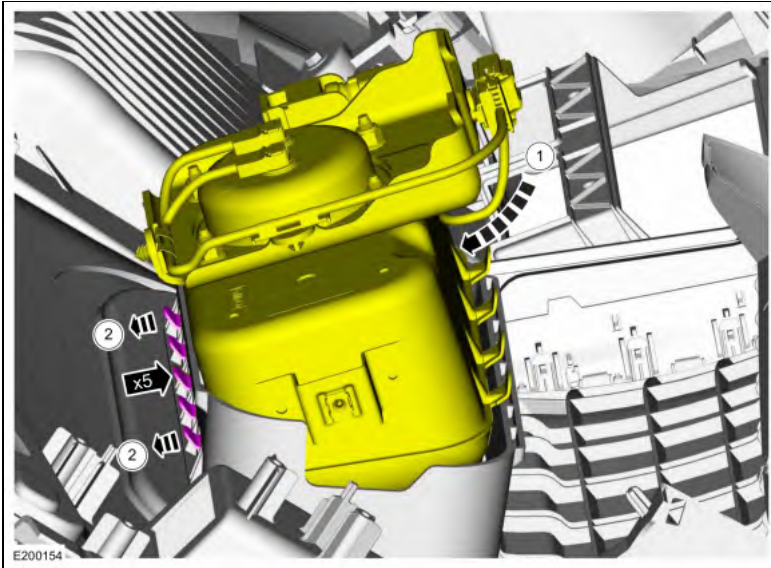


- 2.
1. Pull the passenger airbag deployment chute out, making room for the passenger airbag to pass.
 2. Rotate the passenger airbag down and into the deployment chute.

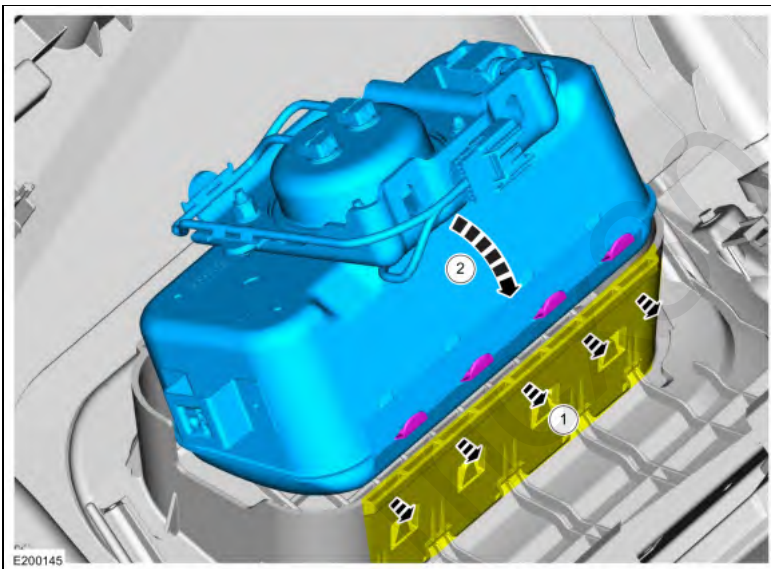


3. Engage the passenger airbag retainers to the deployment chute.

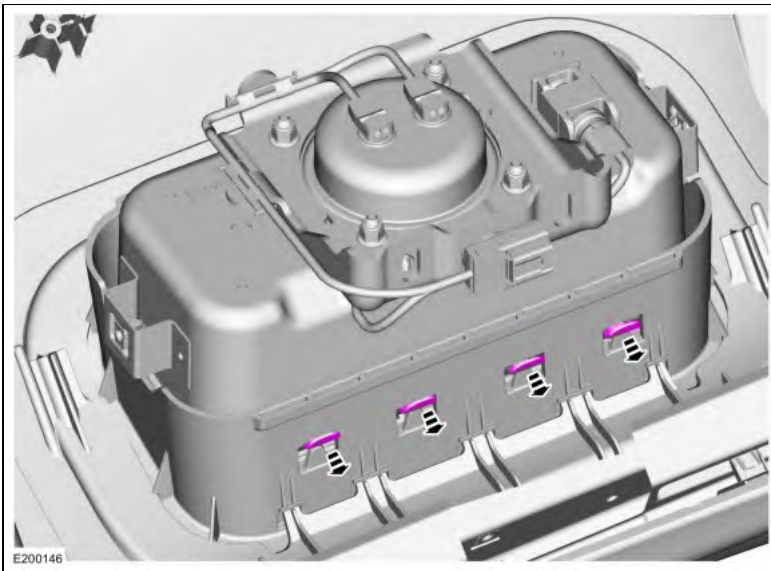


4. Install the brackets and screws.
Torque: 22 lb.in (2.5 Nm)

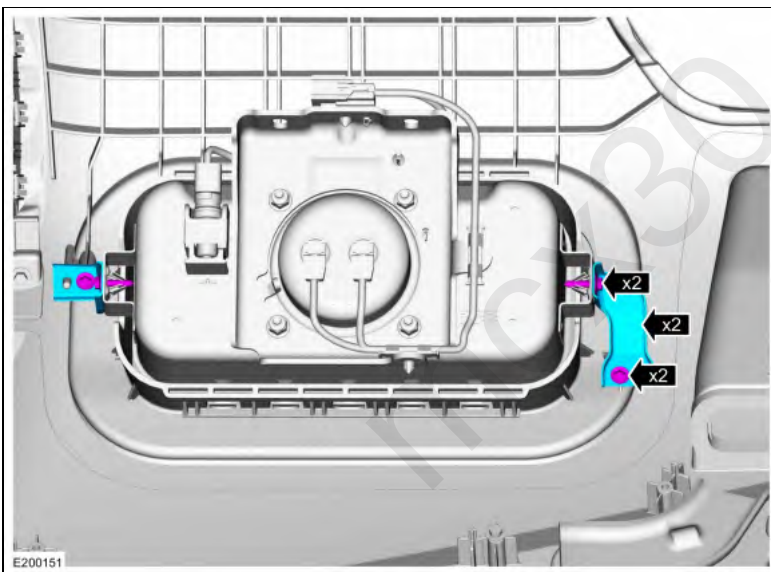


5. Position the air conditioning duct and install the screws.

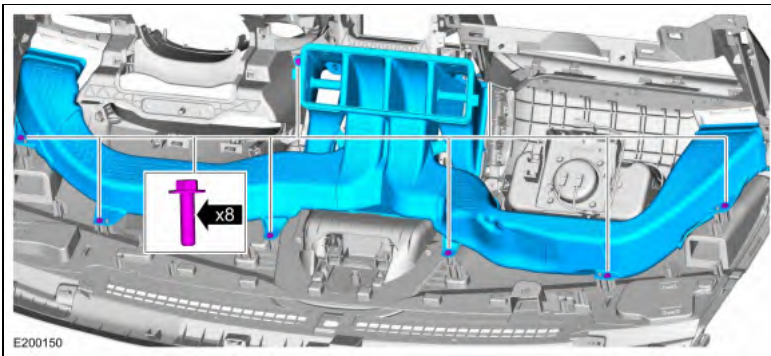

6. Position the center defrost duct and install the screws.

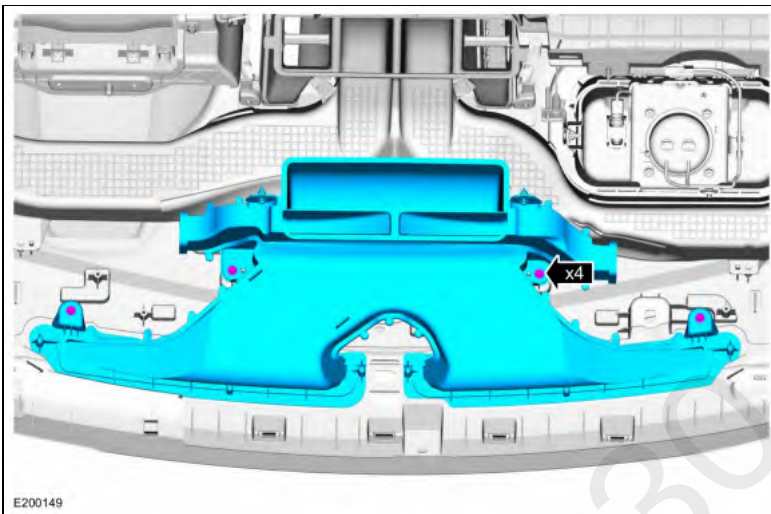

7. Position the LH and RH demister ducts and install the screws.

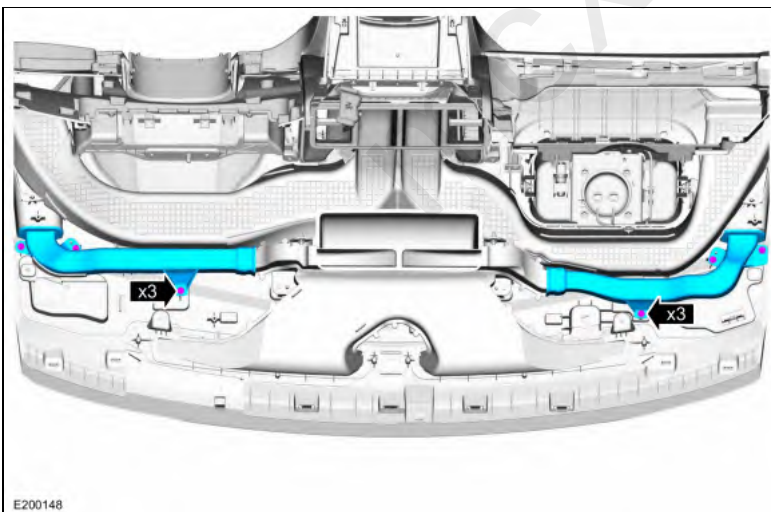

8. Install the instrument panel upper section.
Refer to: Instrument Panel Upper Section (501-12 Instrument Panel and Console, Removal and Installation).

9. Repower the SRS.
Refer to: Supplemental Restraint System (SRS) Repowering (501-20B Supplemental Restraint System, General Procedures).

Passenger Knee Airbag

Special Tool(s) / General Equipment

Interior Trim Remover


Removal

WARNING: The following procedure prescribes critical repair steps required for correct restraint system operation during a crash. Follow all notes and steps carefully. Failure to follow step instructions may result in incorrect operation of the restraint system and increases the risk of serious personal injury or death in a crash.


NOTE: Removal steps in this procedure may contain installation details.

1. Depower the SRS.
Refer to: Supplemental Restraint System (SRS) Depowering (501-20B Supplemental Restraint System, General Procedures).
2. **NOTE:** This step is only necessary when installing a new passenger knee airbag.


Remove the glove compartment lock cylinder.
Refer to: Glove Compartment Lock Cylinder (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
3. Release the clips and remove the RH instrument panel finish panel.
Use the General Equipment: Interior Trim Remover

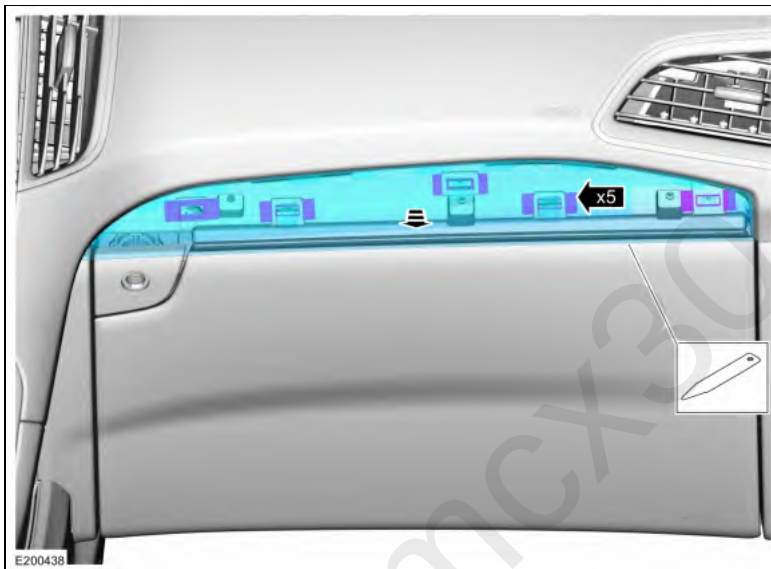

4. Open the glove compartment.

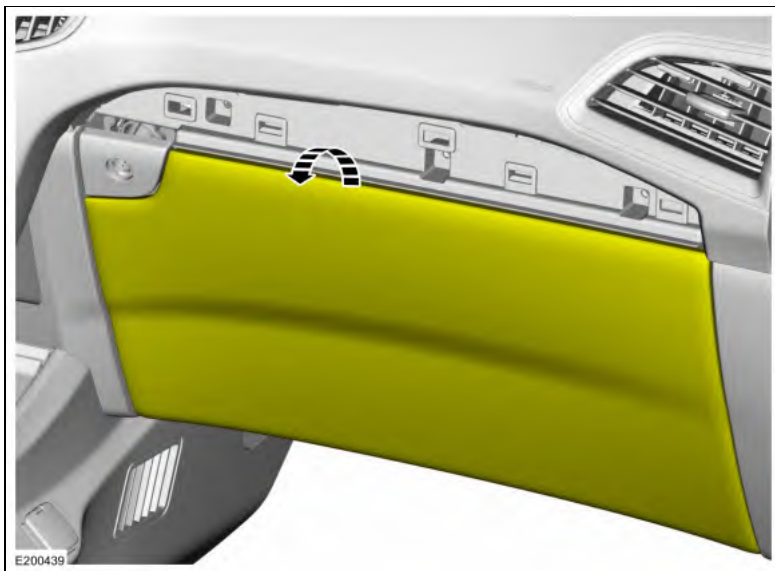

5. Detach the glove compartment door damper.

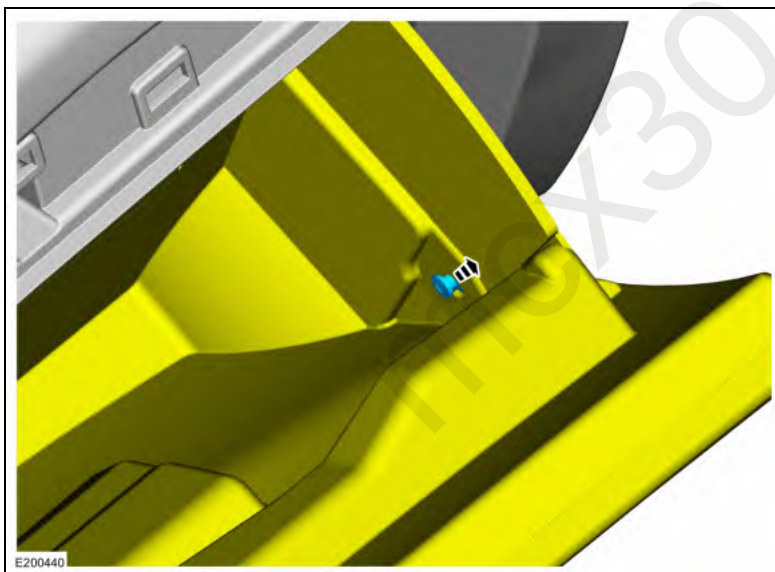

6. Push the tabs and release the glove compartment door.