






- 6.
- Remove the height adjusting handle.
1. Raise the height adjusting handle.
 2. Release the locking tab.
 3. Slide the height adjusting handle forward.

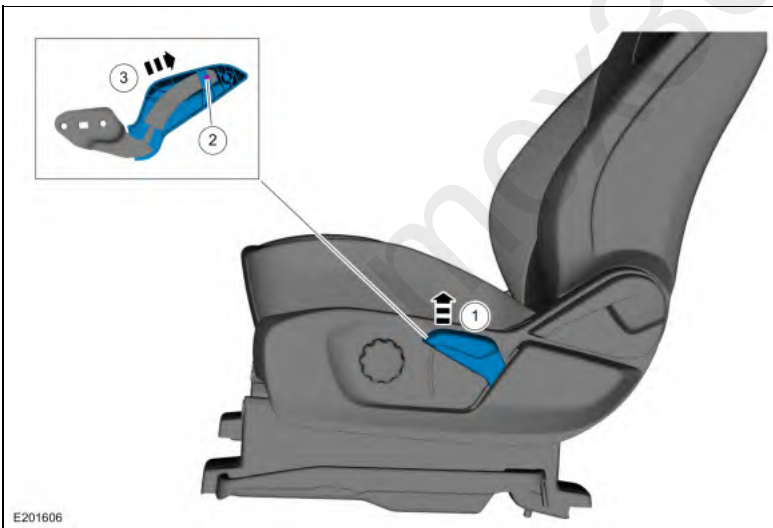

- 7.
1. Remove the clip and the recline handle.
 2. Remove the clip and the manual lumbar knob.

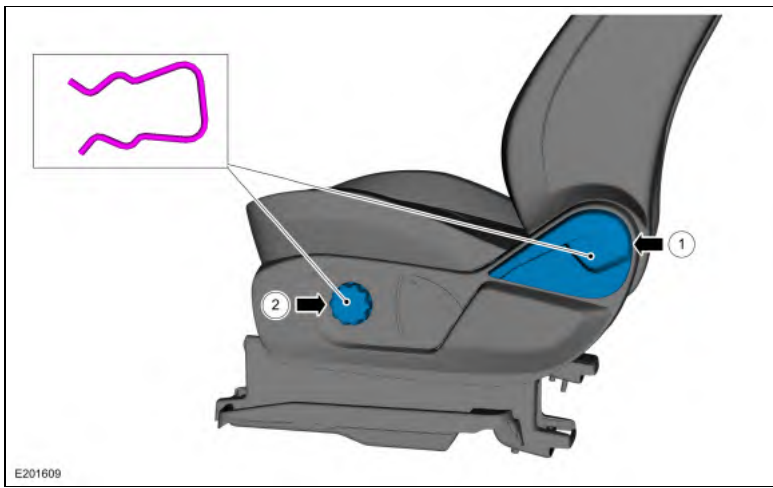


8. Remove the side shield screws.

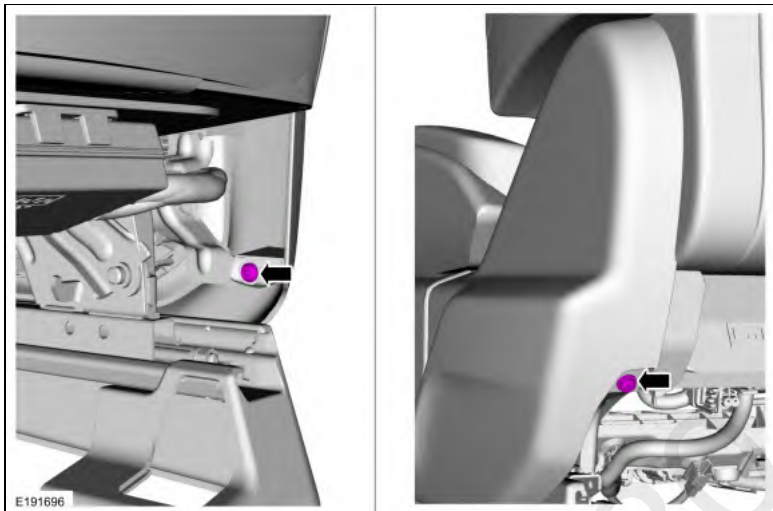


9. Remove the side shield.

1. Firmly grasp the side shield, lift up and out, separating the side shield from the recliner bracket.
2. Slide the side shield forward.
3. Lift up on the front of the side shield and slide the side shield from the height adjusting handle lever.

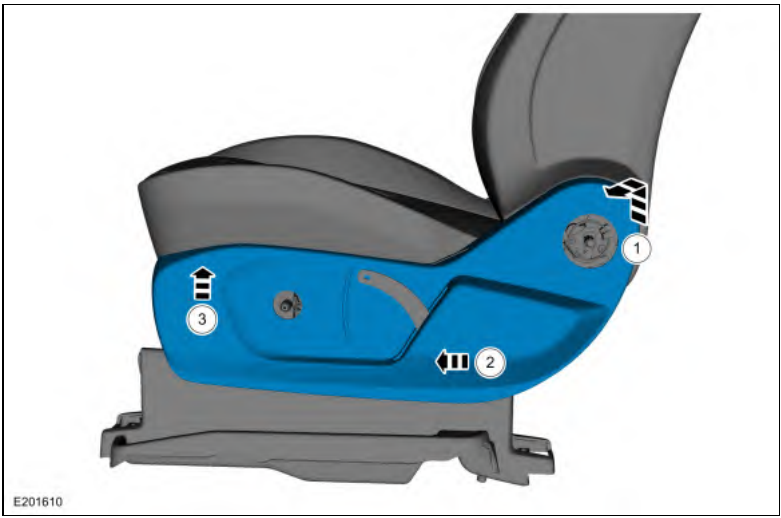

10. Position the manual lumbar assembly cable away from the seat track.
- Disconnect the cable from the manual lumbar actuator.
 - Detach the cable retainers from the seat track.

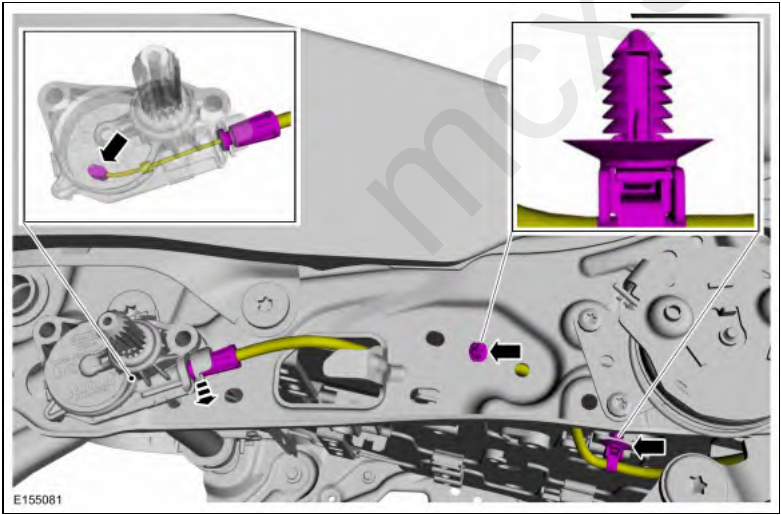


11. Route the manual lumbar cable through the backrest cover opening



12. **NOTE:** *Power seat shown, manual seat similar.*


13. Remove the backrest cover pin-type retainers.

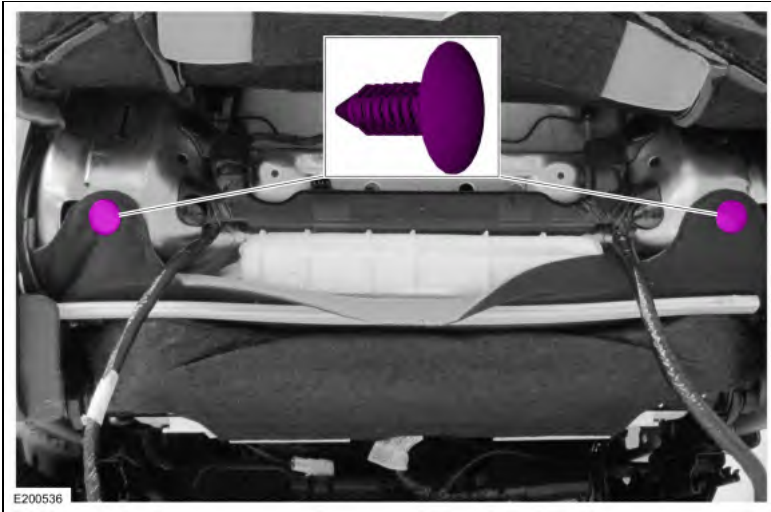


14. **NOTICE:** Use care when separating the seat backrest trim cover from the hook-and-loop strips or the hook-and-loop strips may be torn from the seat backrest foam.

Partially invert the backrest cover enough to access the side airbag deployment chute retainer.


1. Release the hook and loop strips.
2. Invert the backrest cover.

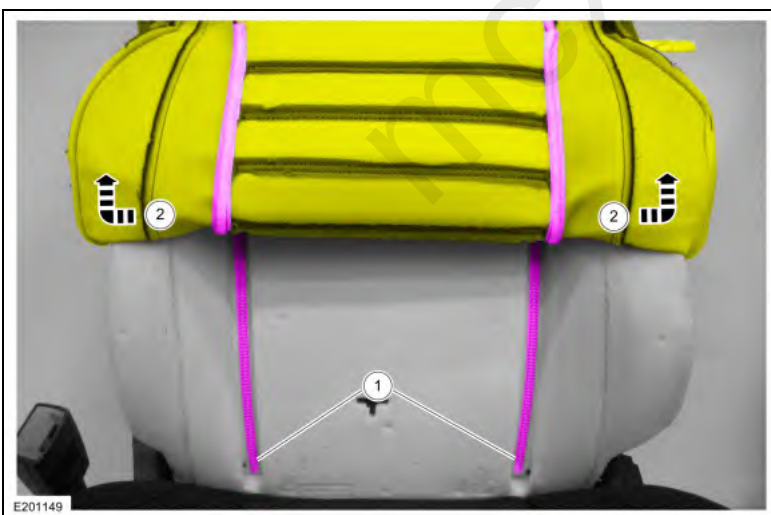

15. Release the side airbag deployment chute retainer and position the chute through the backrest foam opening.

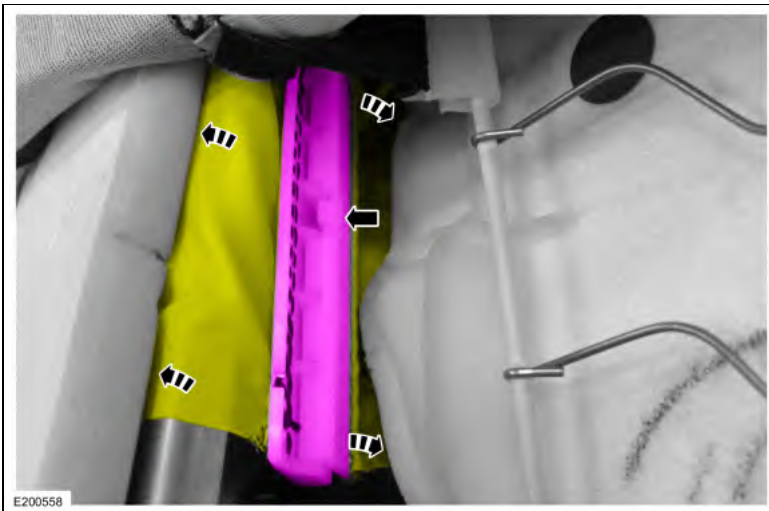

16. Partially invert the backrest cover and release the backrest cover J-clips.

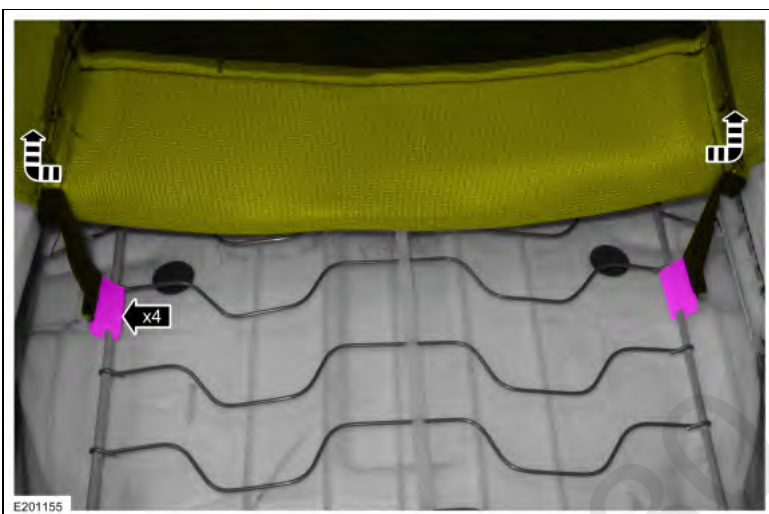


Seats without climate control

17. **NOTICE:** Use care when separating the seat backrest trim cover from the hook-and-loop strips or the hook-and-loop strips may be torn from the seat backrest foam.

Partially invert the backrest cover to the hog rings.


1. Release the hook and loop strips.
2. Invert the backrest cover.

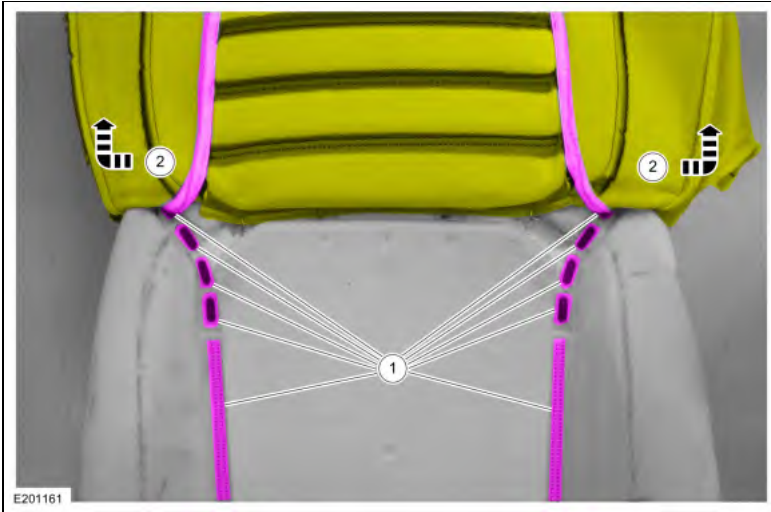

Seats with climate control

18. **NOTE:** Follow the unique instructions or graphic for this step in the installation.


Remove the hog rings.

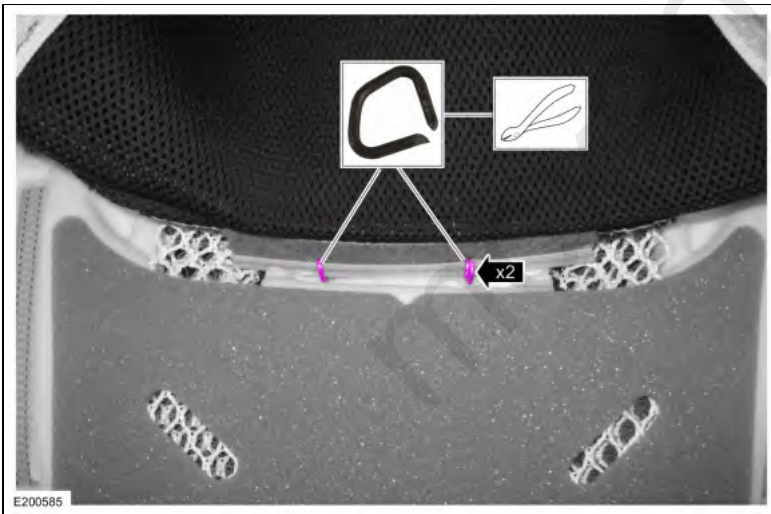

19. **NOTICE:** Use care when separating the seat backrest trim cover from the hook-and-loop strips or the hook-and-loop strips may be torn from the seat backrest foam.



Partially invert the backrest cover enough to access the upper hog rings.

1. Release the hook and loop strips.
2. Invert the backrest cover.

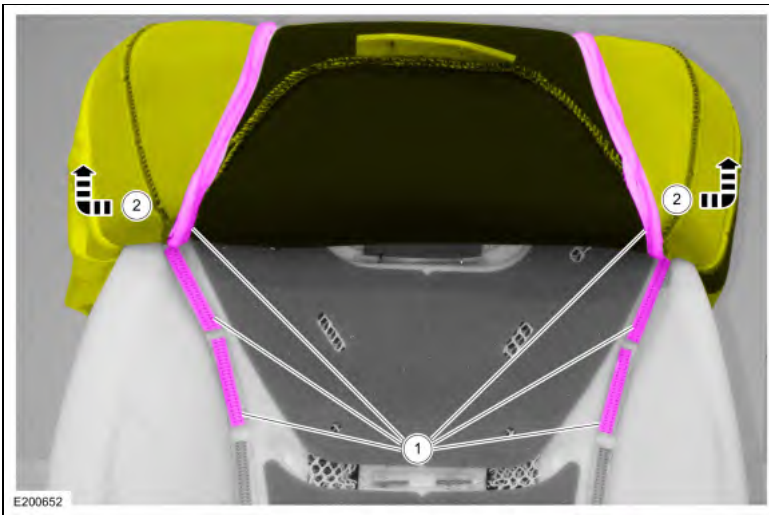


All seats

20. Remove the side airbag nuts.
Torque: 53 lb.in (6 Nm)

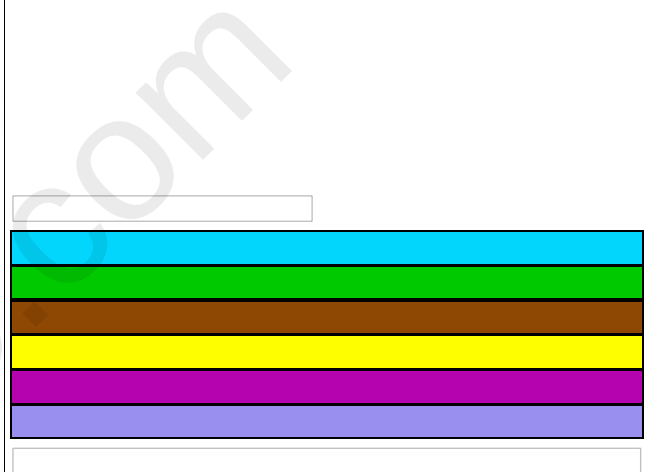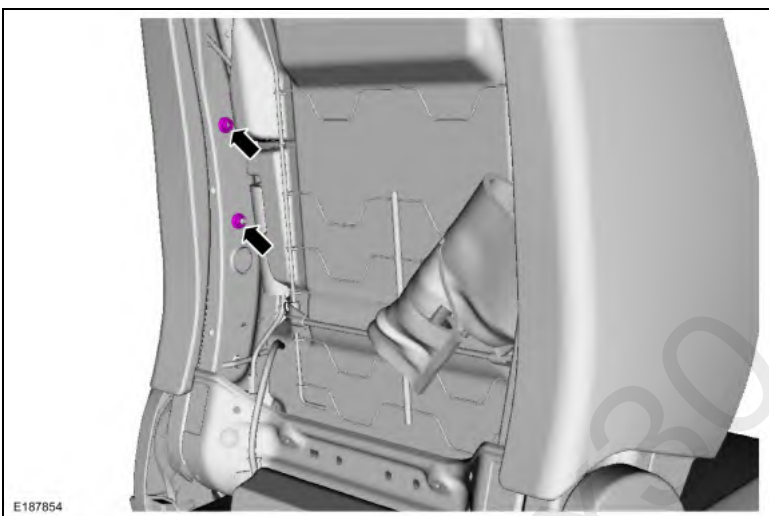

- 21.
1. Detach the side airbag studs from the backrest frame and position the side airbag out of the backrest foam pad pocket.
 2. Disconnect the side airbag electrical connector.
 3. Remove the side airbag.

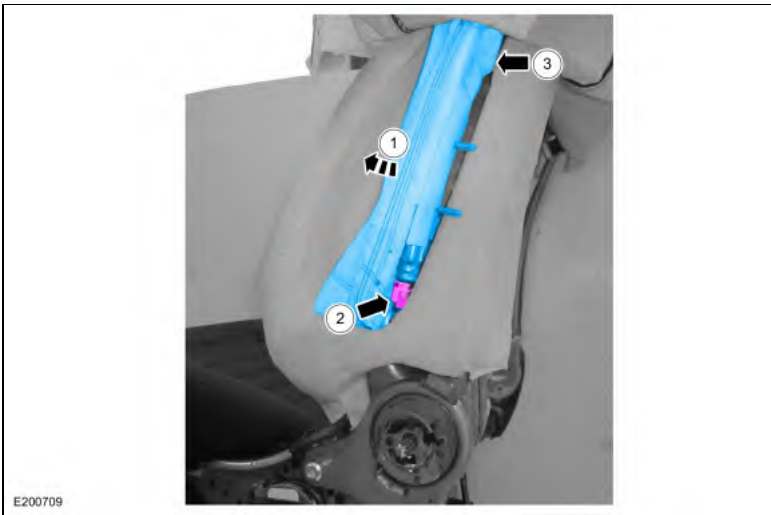


Installation

⚠️**WARNING:** Incorrect repair techniques or actions can cause an accidental Supplemental Restraint System deployment. Make sure the restraint system is depowered before reconnecting the component. Refer to the Supplemental Restraint System depowering General Procedure in section 501-20B. Failure to precisely follow depowering instructions could result in serious personal injury from an accidental deployment.

1. ⚠️**WARNING:** Inspect the seat side airbag, airbag cavity, mounting surface and deployment chute for damage or the presence of foreign material. Remove all foreign material. Install a new side airbag if it is damaged. Install a new deployment chute if the deployment chute is damaged. Failure to follow these instructions may result in the seat side airbag deploying incorrectly and increase the risk of serious personal injury or death in a crash.

To install, reverse the removal procedure.

2. Use the General Equipment: Hog Ring Plier

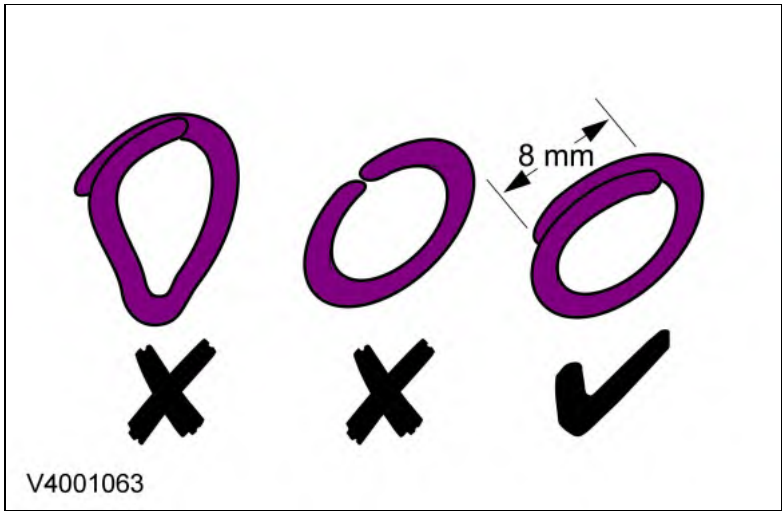

mcx30.com


Seat Position Sensor

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. **NOTE:** RH manual seat shown, other seats similar.

1. Remove the screw.
Torque: 8 lb.in (0.9 Nm)
2. Disconnect the electrical connector.
3. Remove the seat position sensor.

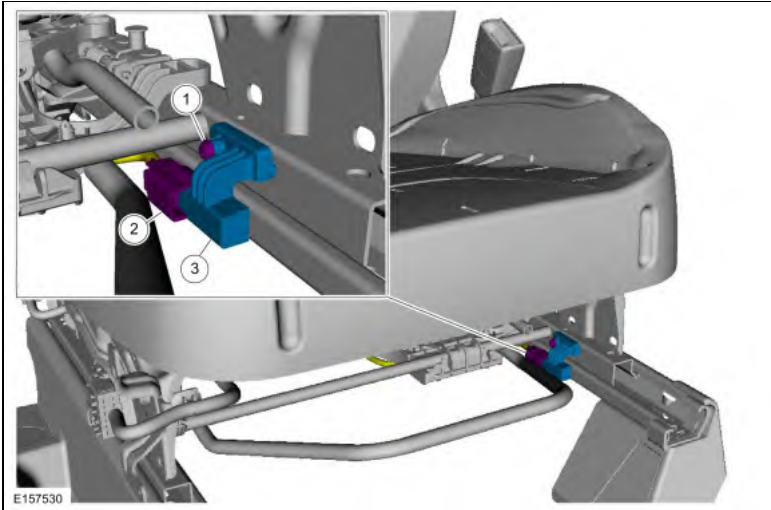

Installation

1. To install, reverse the removal procedure.


Side Curtain Airbag

Removal


WARNING: The following procedure prescribes critical repair steps required for correct restraint system operation during a crash. Follow all notes and steps carefully. Failure to follow step instructions may result in incorrect operation of the restraint system and increases the risk of serious personal injury or death in a crash.

NOTE: Removal steps in this procedure may contain installation details.

1. Depower the SRS.
Refer to: Supplemental Restraint System (SRS) Depowering (501-20B Supplemental Restraint System, General Procedures).
2. Lower the headliner.
Refer to: Headliner - Lowering (501-05 Interior Trim and Ornamentation) .
3.
 1. Disconnect the side curtain airbag electrical connector.
 2. Remove the side curtain airbag screws.

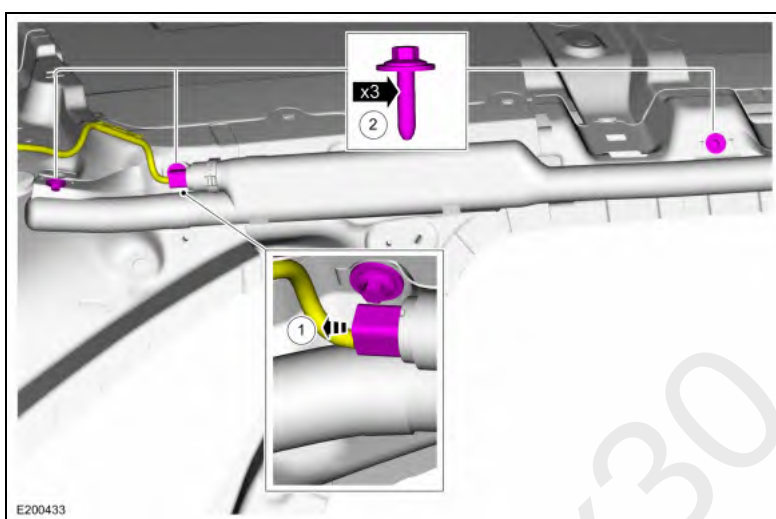

4. Remove the side curtain airbag screws near the B-pillar.

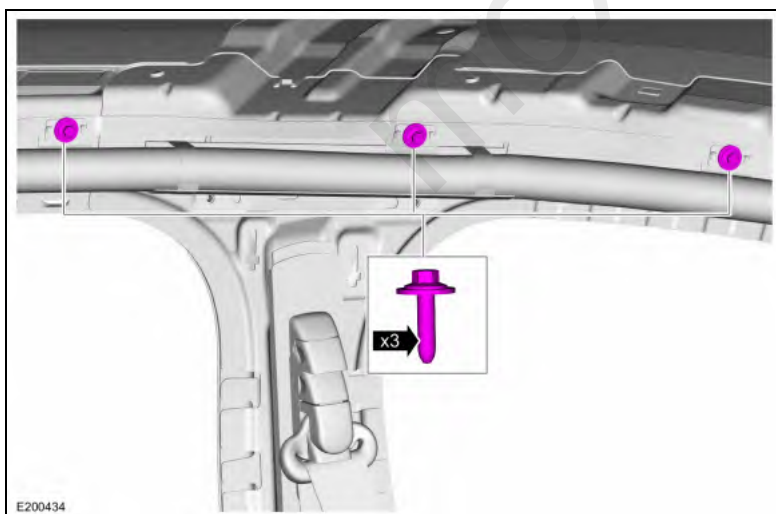

5. Remove the side curtain airbag screws at the A-pillar.