



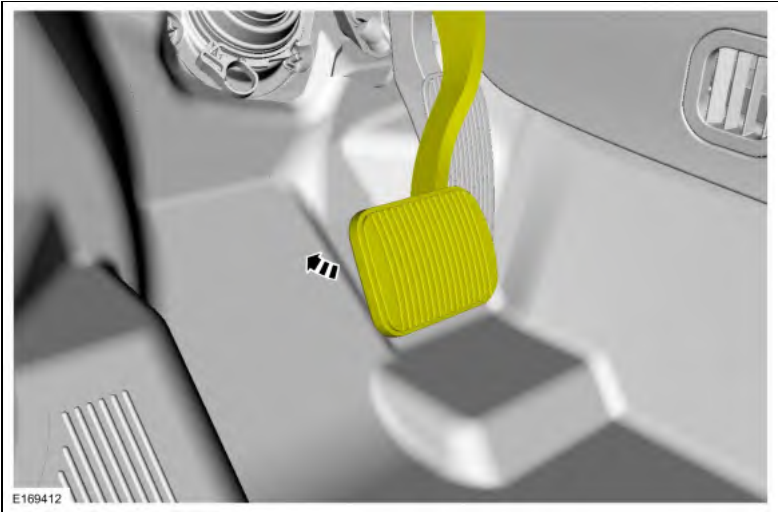


6. Remove the master cylinder bleeding set.
Remove the General Equipment: Master Cylinder Bleeding Set



7. Tighten the brake tube fittings.
Refer to: Specifications (206-00 Brake System - General Information, Specifications).

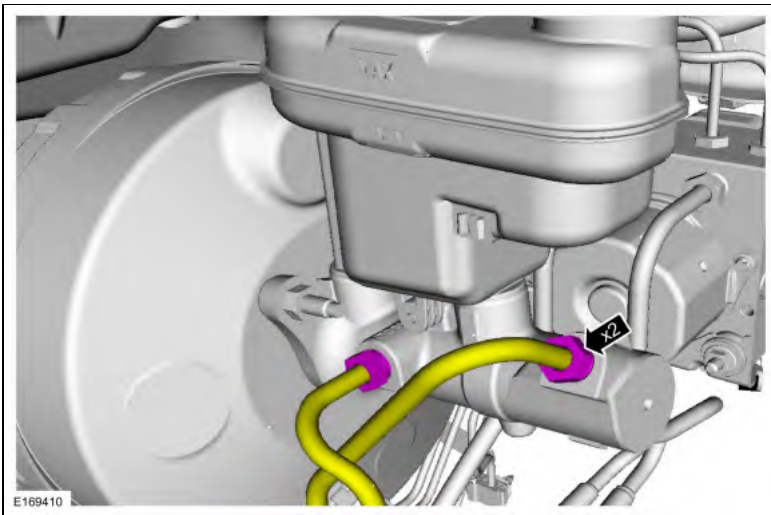

8. Fill the reservoir with clean, specified brake fluid.
Refer to: Specifications (206-00 Brake System - General Information, Specifications).

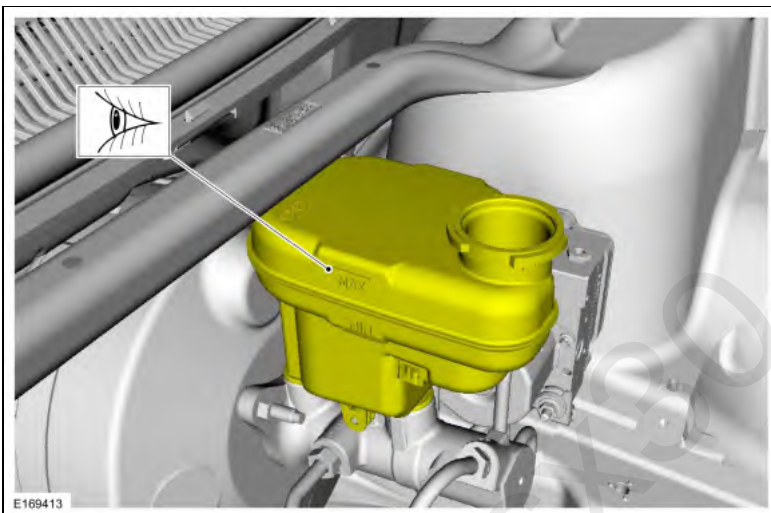

9. Refer to: Brake System Pressure Bleeding (206-00 Brake System - General Information, General Procedures).

Brake Caliper, Wheel Cylinder, Brake Hose or Brake Tube

10. **NOTE:** Pressure bleeding the brake system is required anytime a hydraulic brake system component has been disconnected.
Refer to: Brake System Pressure Bleeding (206-00 Brake System - General Information, General Procedures).

206-03 Front Disc Brake

Diagnosis and Testing