



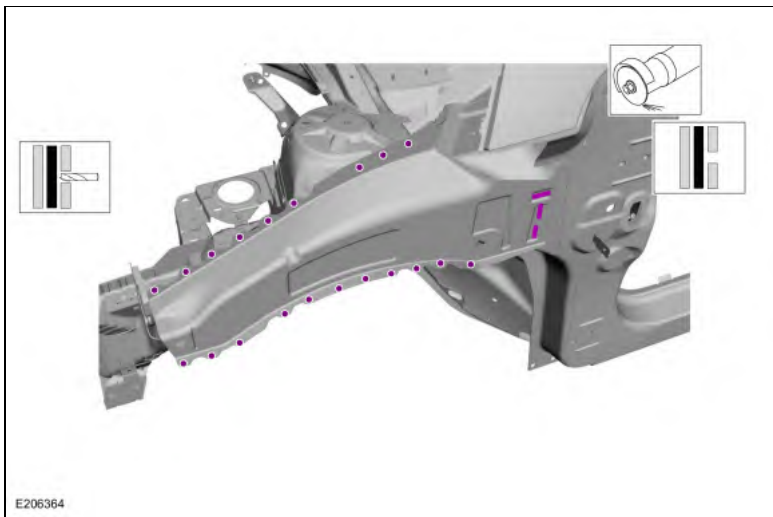

5. Remove the fender apron reinforcement panel.
Use the General Equipment: Spot Weld Drill Bit

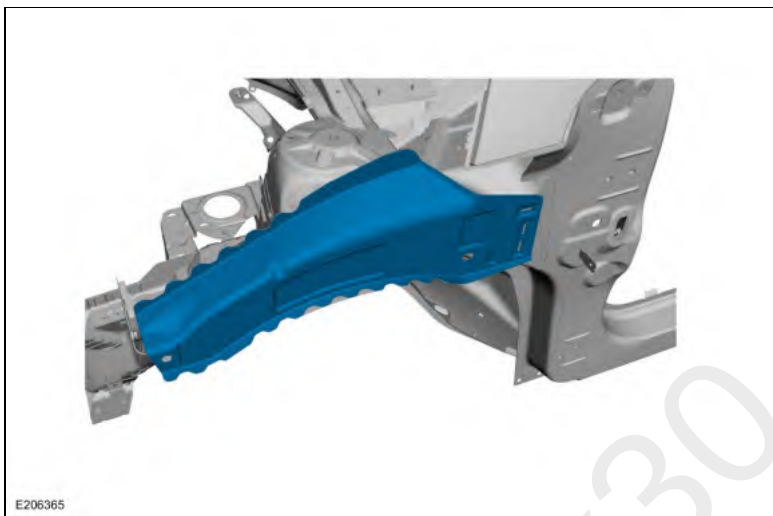

6. **NOTE:** The inner fender apron reinforcement can be sectioned depending on extent of damage. Outline indicated is a general guideline, entire reinforcement will be required if damage is more severe.

Remove the welds and cut through the reinforcement panel.
Use the General Equipment: Grinder
Use the General Equipment: Spot Weld Drill Bit