




## Brake Disc Shield

### Removal

**NOTE:** Removal steps in this procedure may contain installation details.

1. Remove the brake disc.  
Refer to: Brake Disc (206-03 Front Disc Brake, Removal and Installation).
2. Remove the bolts and the brake disc shield.  
Torque: 159 lb.in (18 Nm)

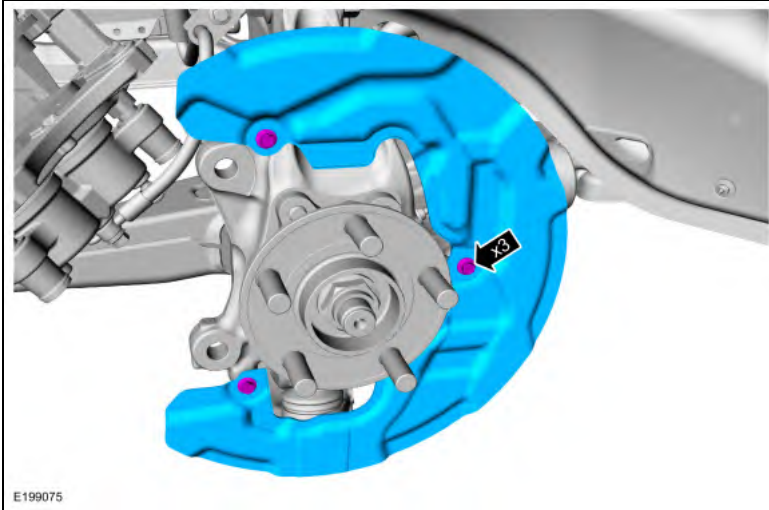

### Installation

1. To install, reverse the removal procedure.

# Brake Pads


## Materials

| Name                                                                  | Specification |
|-----------------------------------------------------------------------|---------------|
| Motorcraft® DOT 4 LV High Performance Motor Vehicle Brake Fluid PM-20 | WSS-M6C65-A2  |
| Motorcraft® Metal Brake Parts Cleaner PM-4-A, PM-4-B                  | -             |

## Removal

**NOTE:** Removal steps in this procedure may contain installation details.

1. Remove the wheel and tire.  
Refer to: Wheel and Tire (204-04A Wheels and Tires, Removal and Installation).
2. Remove and discard the brake caliper spring.

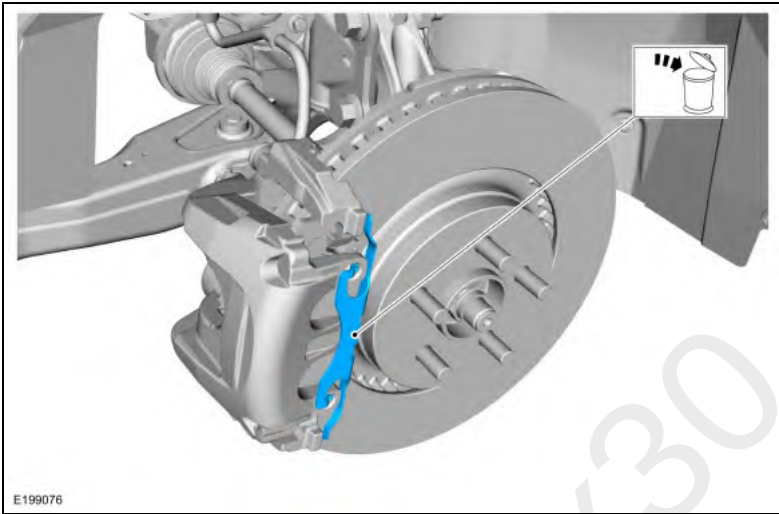

3. **NOTICE:** Do not pry in the caliper sight hole to retract the pistons as this can damage the pistons and boots.  
**NOTICE:** Do not allow the brake caliper and anchor plate assembly to hang from the brake hose or damage to the hose can occur.  
Remove the covers, the guide pins and position the brake caliper aside.