


Brake Caliper Anchor Plate

Removal

NOTE: Steps in the removal procedure may contain installation details.

1. Remove the brake pads.
Refer to: Brake Pads (206-04 Rear Disc Brake, Removal and Installation).
2. Remove the bolts and the brake caliper anchor plate. Discard the bolts.
Torque: 76 lb.ft (103 Nm)

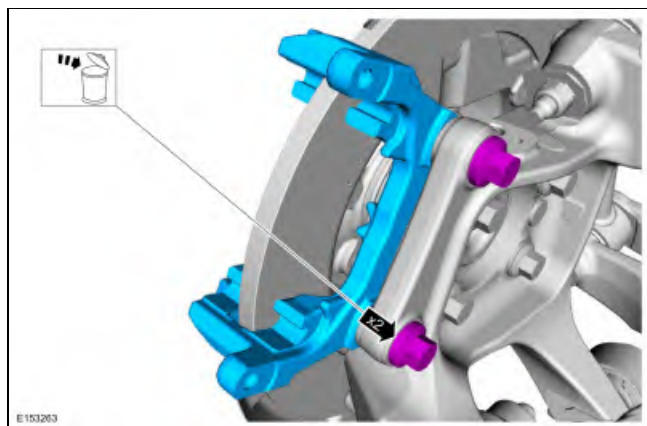

Installation

1. To install, reverse the removal procedure.

Materials

Name	Specification
Motorcraft® Metal Brake Parts Cleaner PM-4-A, PM-4-B	-

Removal


NOTE: Removal steps in this procedure may contain installation instructions.

1. **WARNING:** Service actions on vehicles equipped with electronic parking brakes may cause unexpected parking brake application, which could result in injury to hands or fingers. Deactivate the electronic parking brake system prior to servicing or removing rear brake components. Failure to follow this instruction may result in serious personal injury.

Activate the EPB service mode.

Refer to: Electronic Parking Brake (EPB) Service Mode Activation and Deactivation (206-05 Parking Brake and Actuation, General Procedures).

2. Remove the wheel and tire.
Refer to: Wheel and Tire (204-04A Wheels and Tires, Removal and Installation).
3. Remove the bolts and position the brake caliper and anchor plate assembly aside. Discard the bolts.
Torque: 76 lb.ft (103 Nm)

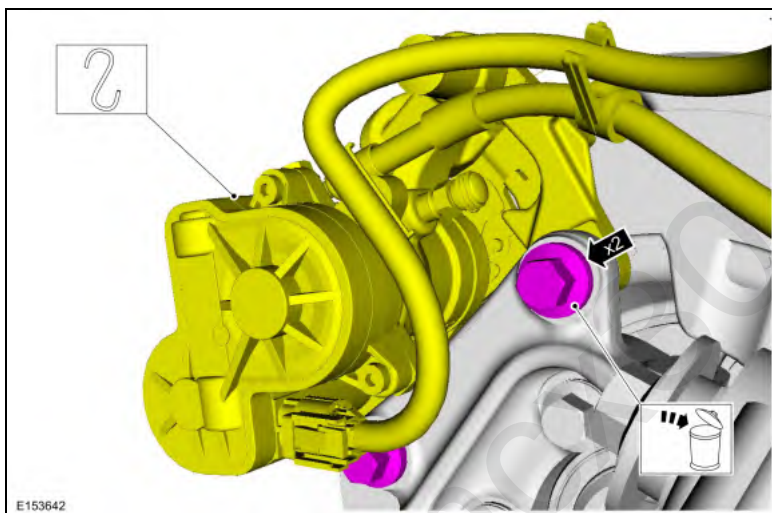

4. Remove the brake disc.

