



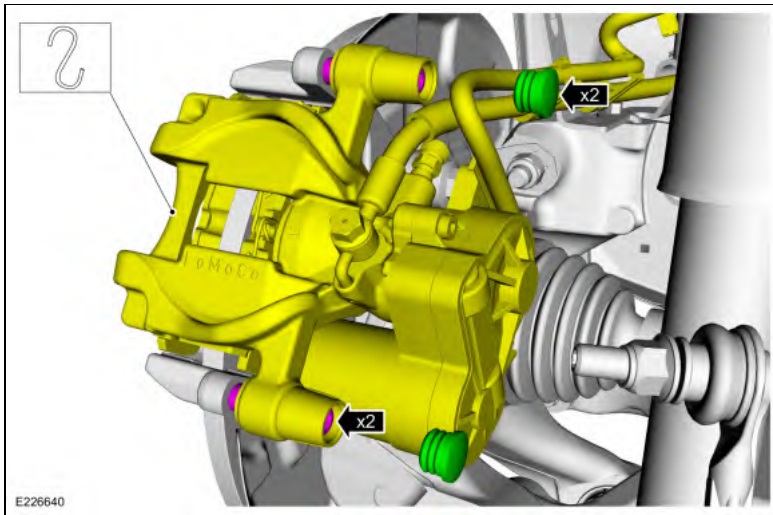

5. **NOTICE:** Brake pads with adhesive on the insulator are one-time use only. When the brake pads are separated from the brake caliper, new brake pads must be installed to prevent brake noise and shudder.

Remove and discard the brake pads.

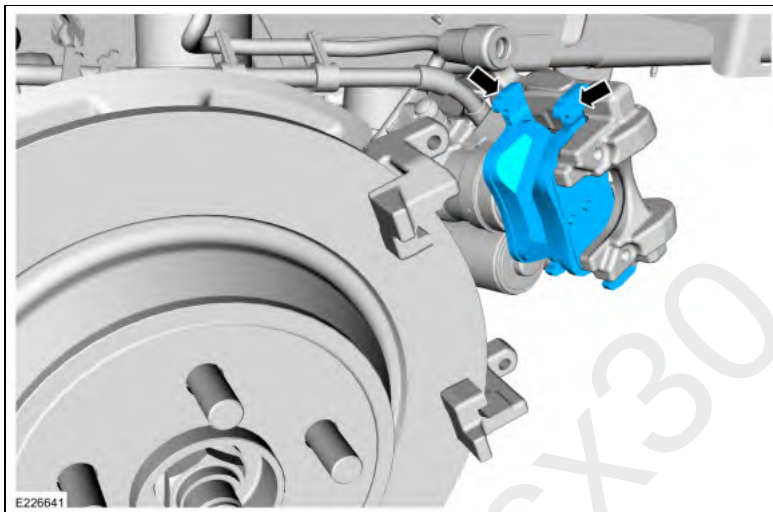

6. **NOTICE:** Use care when pushing the caliper piston into the caliper piston bores or damage to components may occur.

Compress the brake caliper piston until the piston bottoms out in the brake caliper bore.

- **NOTICE:** Do not apply over 20 Nm (177 in-lb) force when rotating the brake caliper piston or internal damage to the brake caliper may occur.

If the brake caliper piston bottoms out and the piston is still not fully compressed, rotate the piston clockwise while pushing inward using a brake caliper piston retractor until the piston is fully compressed.

Use the General Equipment: Brake Caliper Piston Retractor