

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. If installing a new steering gear, upload the PSCM configuration to the scan tool.
Refer to: Module Configuration - System Operation and Component Description (418-01 Module Configuration, Description and Operation).
2. Remove the front subframe.
Refer to: Front Subframe (502-00 Uni-Body, Subframe and Mounting System, Removal and Installation).
3.
 1. Rotate the steering gear boot counter clockwise.
 2. Remove the steering gear boot.



-



-
- E155855

