


Steering Column Multifunction Switch LH

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the steering column shrouds.
Refer to: Steering Column Shrouds (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. If equipped.
Remove the steering column control switch.
Refer to: Steering Column Control Switch (211-05 Steering Wheel and Column Electrical Components, Removal and Installation).
3. **NOTE:** Make sure the component terminals are not bent or damaged.
Remove the screw(s) and the LH steering column multifunction switch.

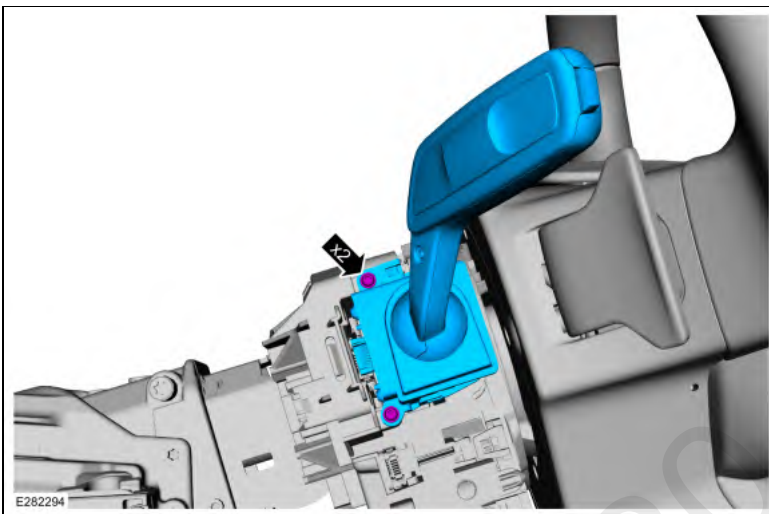

Installation

1. To install, reverse the removal procedure.

Steering Column Multifunction Switch RH


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the steering column shrouds.
Refer to: Steering Column Shrouds (501-05 Interior Trim and Ornamentation, Removal and Installation).

2. **NOTE:** Make sure the component terminals are not bent or damaged.

Remove the screws and the RH steering column multifunction switch.

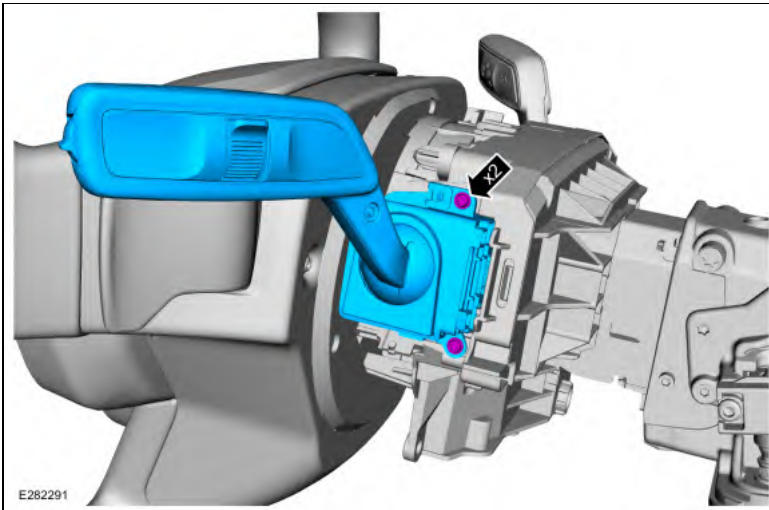

Installation

1. To install, reverse the removal procedure.