



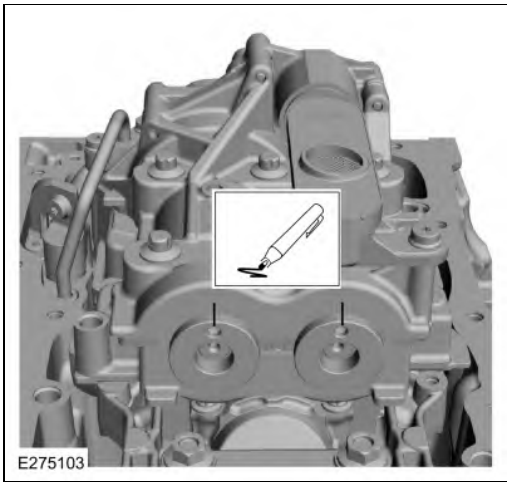

3. Remove the bolts and the oil outlet tube.

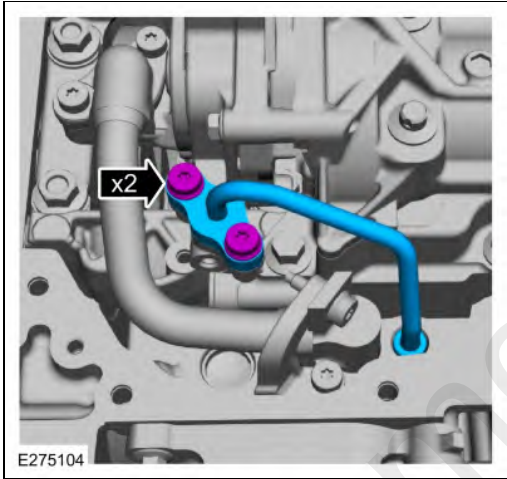

4. Inspect the oil outlet tube O-ring seals and replace if damaged.