

Removal

mcx30.com

Engine

Special Tool(s) / General Equipment

 E216392	307-566 Retainer, Torque Converter TKIT-2006C-FFMFLM TKIT-2006C-LM TKIT-2006C-ROW
 E158906	307-569 Disconnect Tool TOC Line (1/2) TKIT-2006U-F/FM TKIT-2006U-FLM/LM TKIT-2006U-ROW1 TKIT-2006U-ROW2
Magnetic Socket	
Floor Crane	
Adjustable Mounting Arm	
Oil Drain Equipment	
Side Cutter Pliers	
Cable Ties	
Hose Clamp Remover/Installer	
Powertrain Jack	
Wooden Block	

NOTICE: The turbocharger compressor vanes can be damaged by even the smallest particles. When removing any turbocharger or engine air intake system component, ensure that no debris enters the system. Failure to do so may result in damage to the turbocharger.

LHD AWD/LHD FWD

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Release the fuel system pressure.
Refer to: Fuel System Pressure Release (310-00A Fuel System - General Information - 2.0L EcoBoost (184kW/250PS) â€“ MI4, General Procedures).
3. Using a holding device, hold the steering wheel in the straight-ahead position.