



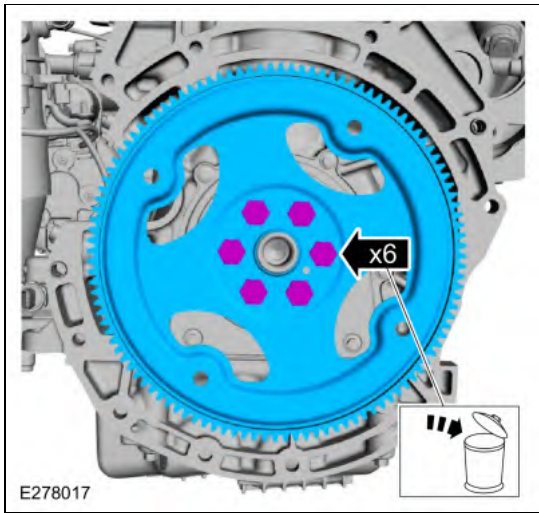

2. Install engine on the mounting stand.
Use the General Equipment: Mounting Stand

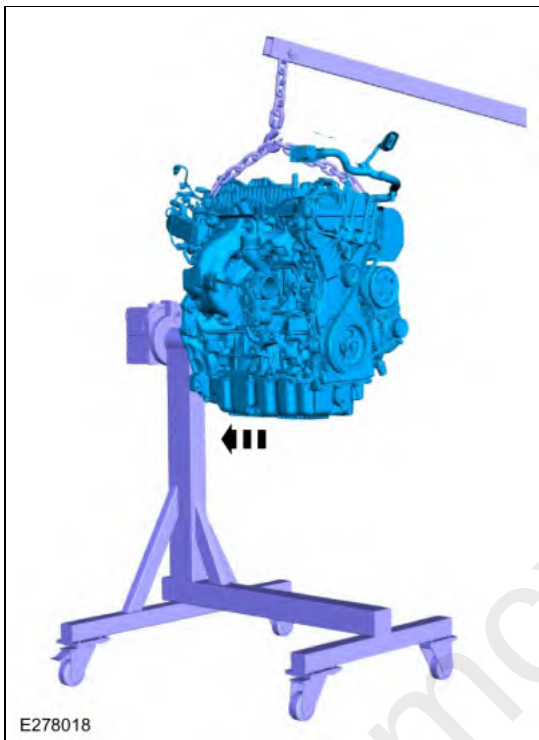

3. Remove the engine lift equipment.