




1. Remove the bolts and the EGR cooler.

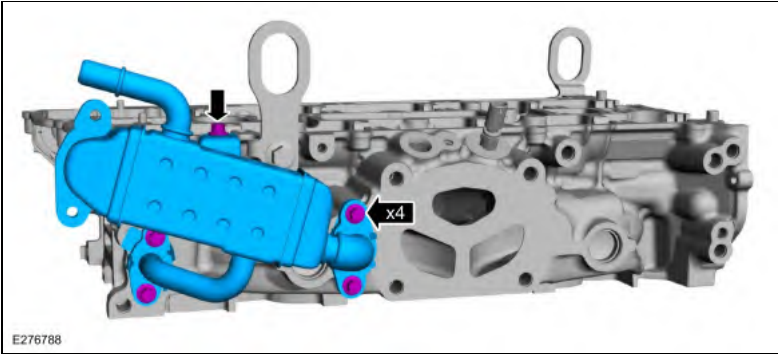

2. Remove and discard the EGR cooler gaskets.

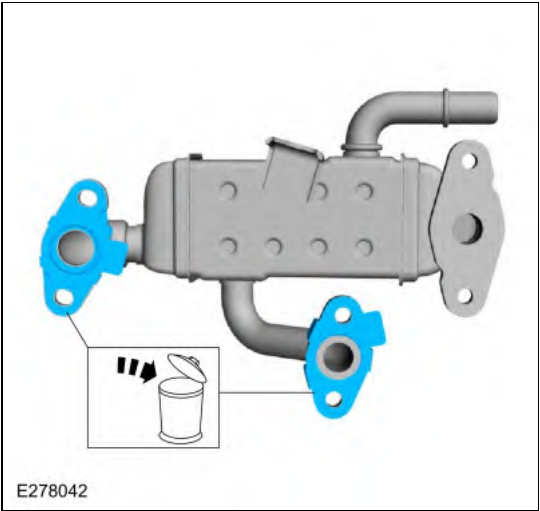

3. If equipped, remove the bolts and the engine lift eyes.

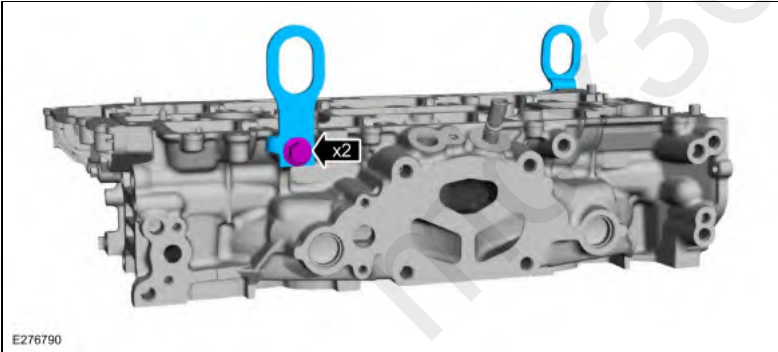

- 4.
- Remove the CHT sensor and the exhaust manifold heat shield.
 - Discard the CHT sensor.