
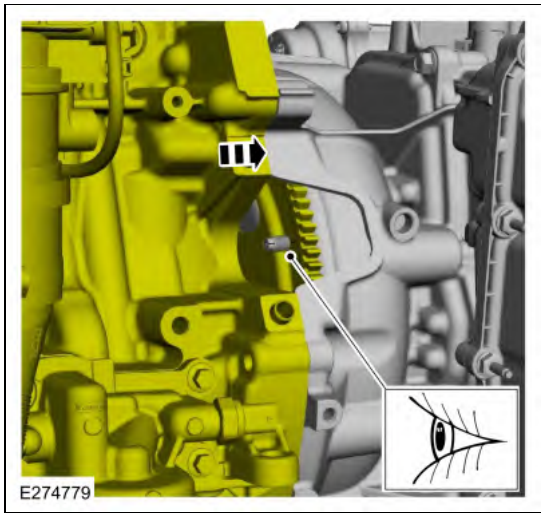
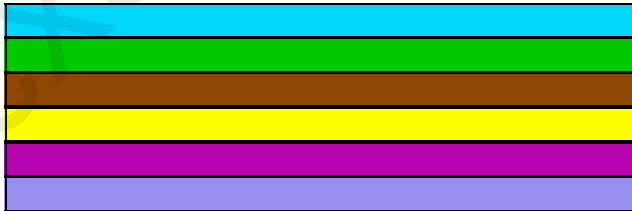


3. With the aid of an assistant, install engine to the transmission and install the bolts.
Torque: 35 lb.ft (48 Nm)

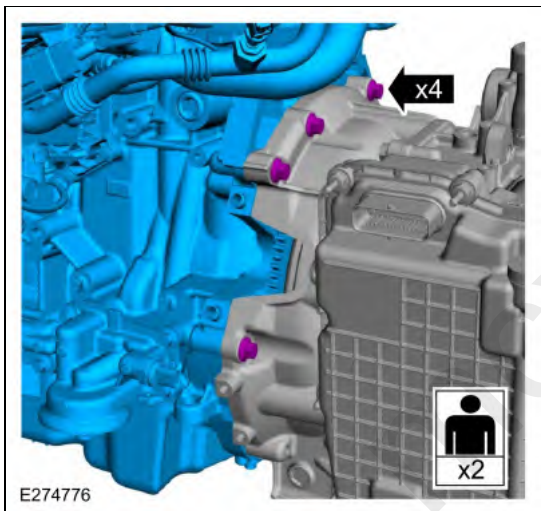

4. Install the adjustable mounting arm.
Use the General Equipment: Adjustable Mounting Arm