


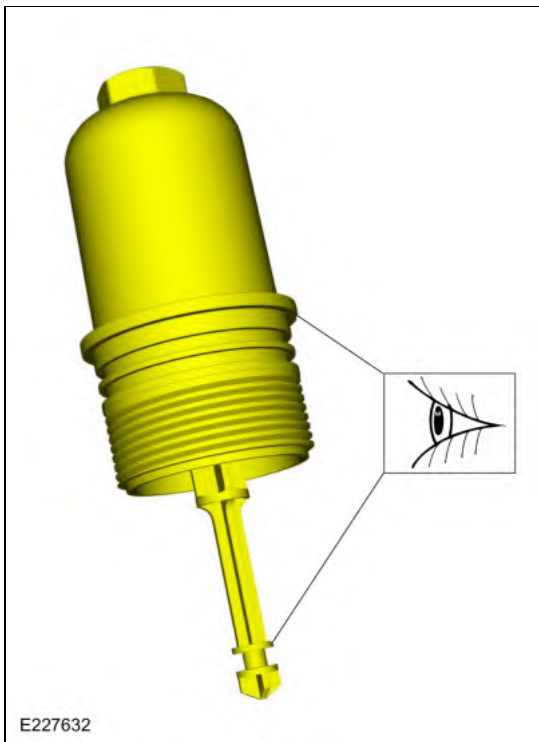

2.

- **NOTE:** Failure to install new oil filter housing-to-engine front cover seals may result in oil leakage.

Install new oil filter housing-to-engine front cover seals and lubricate with clean engine oil.

- **NOTE:** Failure to install a new oil filter housing stem-to-oil reservoir drain port seal will result with the oil flowing through the reservoir drain port and a loss of engine oil pressure.

Install a new oil filter housing stem-to-oil reservoir drain port seal and lubricate with clean engine oil.