




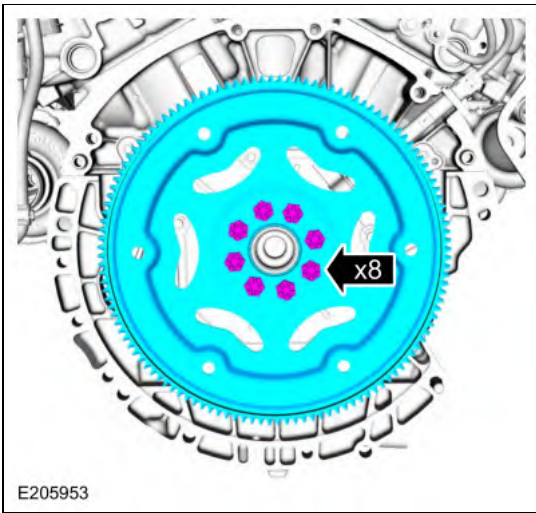

2. Remove the crankshaft sensor ring.

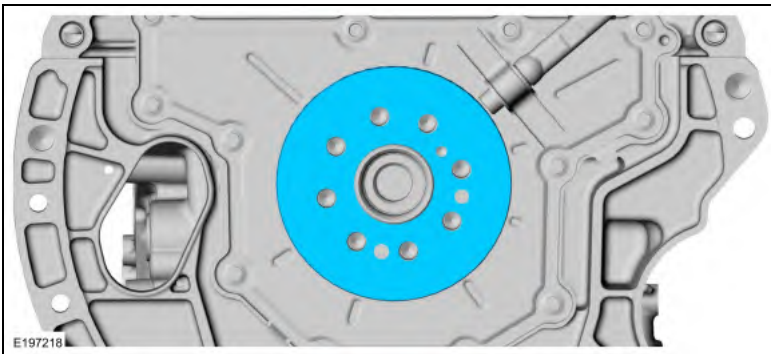

3. Inspect the crankshaft sensor ring for damage. If the crankshaft sensor ring has been dropped or has any visual damage, it must be discarded.

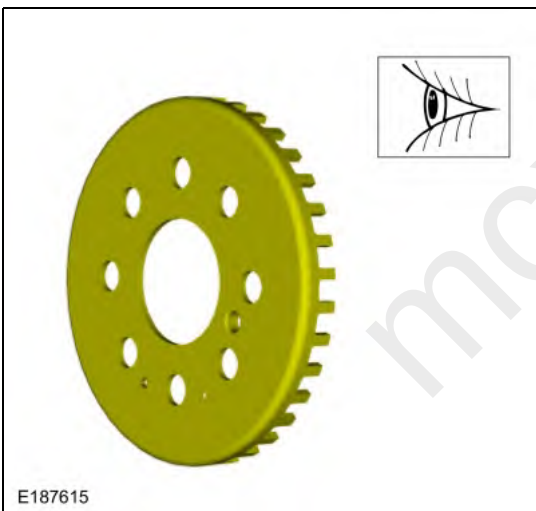

4.
 1. Reposition the CKP sensor electrical connector insulator.
 2. Disconnect the CKP sensor electrical connector.
 3. Loosen the bolt and remove the CKP sensor.
 4. Remove the stud bolt and the wiring harness ground.