


LH cylinder heads


1. **NOTE:** Do not reuse the CHT sensor, install a new sensor.

Remove and discard the CHT sensor.

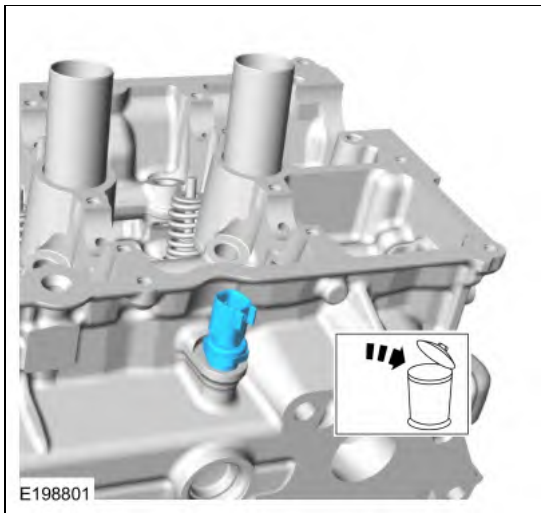


RH cylinder heads

2. Remove the EOP switch.

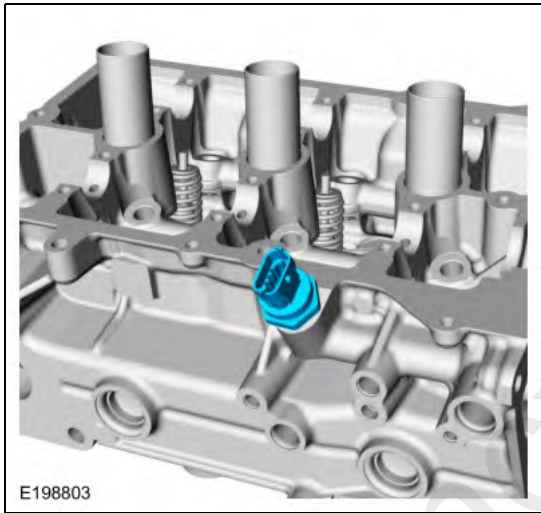

All cylinder heads

3. Using the special tools, remove the keys, retainer and spring.
Use Special Service Tool: 303-300 (T87C-6565-A) Set, Valve Spring Compressor, , 303-350 (T89P-6565-A) Compressor, Valve Spring, , 303-1249 Valve Spring Compressor, , 303-1418 Compressor, Valve Spring

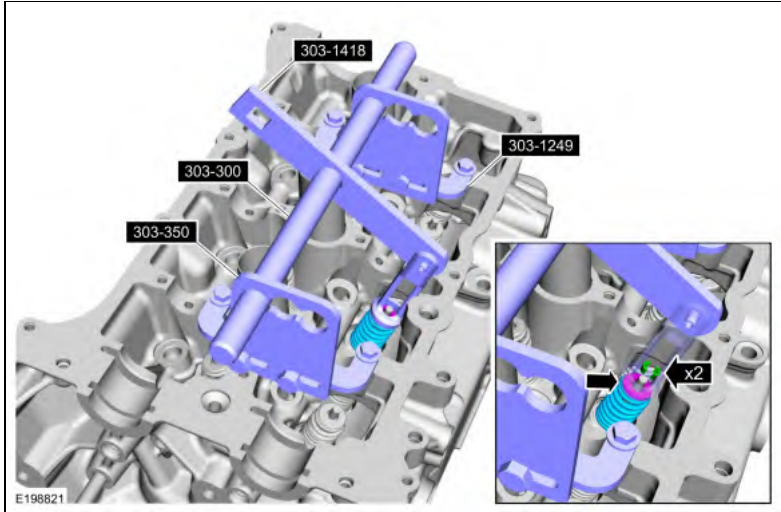

4. Remove and discard the valve stem seal.