



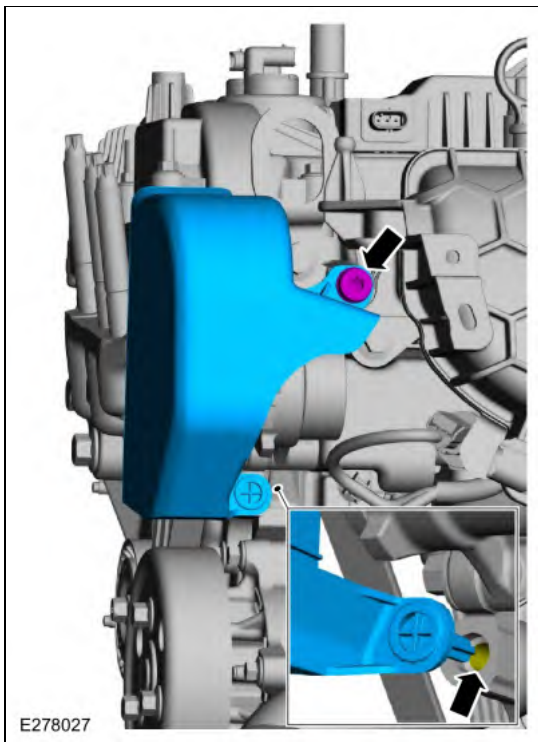

5. **NOTE:** Make sure the accessory drive belt is positioned so coolant can not contaminate the belt.

Rotate the accessory drive belt tensioner and remove the accessory drive belt.

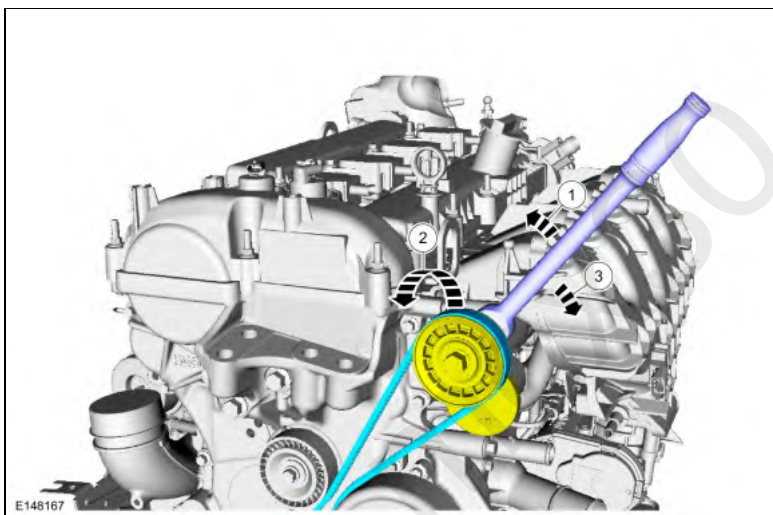

6. **NOTICE:** Cover the A/C belt to prevent coolant contamination of the belt.

Completely cover the A/C belt with waterproof plastic.

7. Remove the bolts and the coolant pump pulley.