


Fuel Pump Driver Module (FPDM)


Removal

NOTE: The fuel pump driver module is attached to the underside of the rear floor above the rear subframe on the left side.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Disconnect the fuel pump driver module electrical connector.

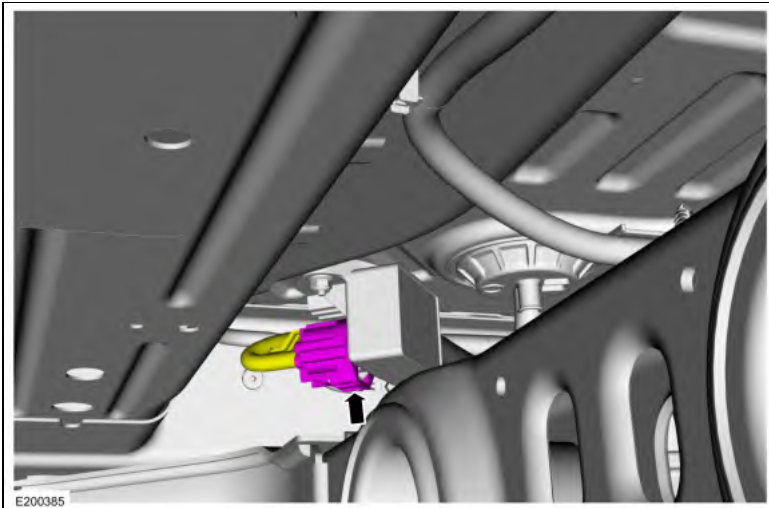

3. Remove the fuel pump driver module nuts and then remove the fuel pump driver module.

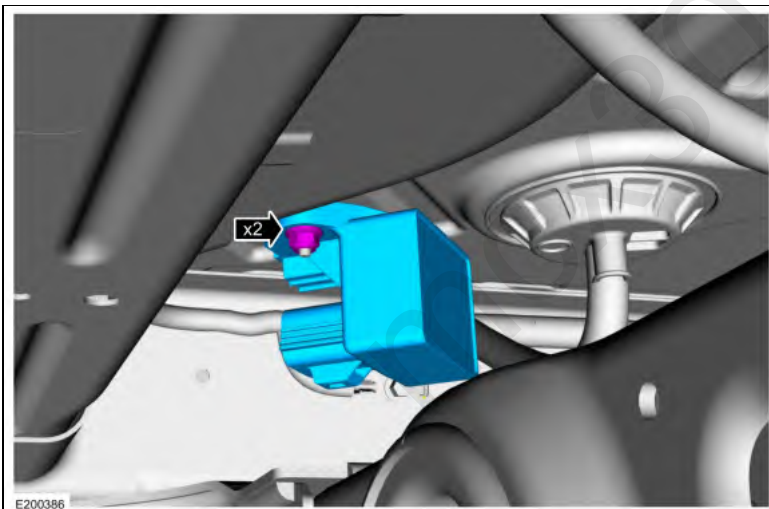

Installation

1. Install the fuel pump driver module, then install and tighten the fuel pump driver module nuts.
Torque: 13 lb.in (1.5 Nm)