



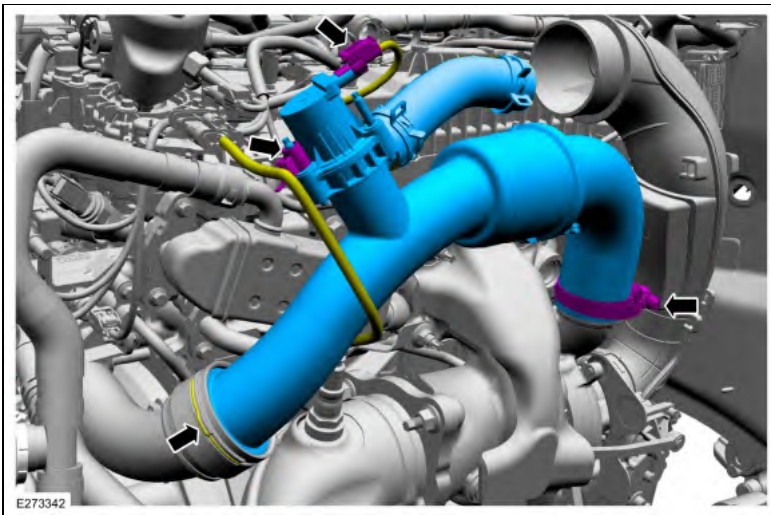

6. Loosen the lower air cleaner outlet pipe clamp, then remove the lower air cleaner outlet pipe.

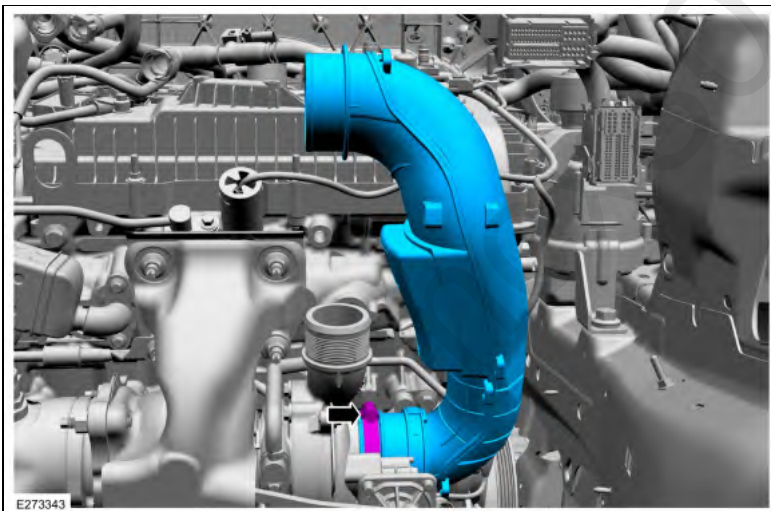

FWD (front wheel drive) vehicles

7. Remove the catalytic converter.
Refer to: Catalytic Converter (309-00A Exhaust System - 2.0L EcoBoost (184kW/250PS) â€“ MI4, Removal and Installation).

AWD (all-wheel drive) vehicles

8. Remove the battery tray.
Refer to: Battery Tray (414-01 Battery, Mounting and Cables, Removal and Installation).
9. Remove and discard the catalytic converter nuts, then move the catalytic converter out of the way.