


Accessory Drive Belt Tensioner

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Remove the accessory drive belt.
Refer to: Accessory Drive Belt (303-05B Accessory Drive - 2.7L EcoBoost (238kW/324PS), Removal and Installation).
3. Remove the bolts and the accessory drive belt tensioner.
Torque: 18 lb.ft (25 Nm)

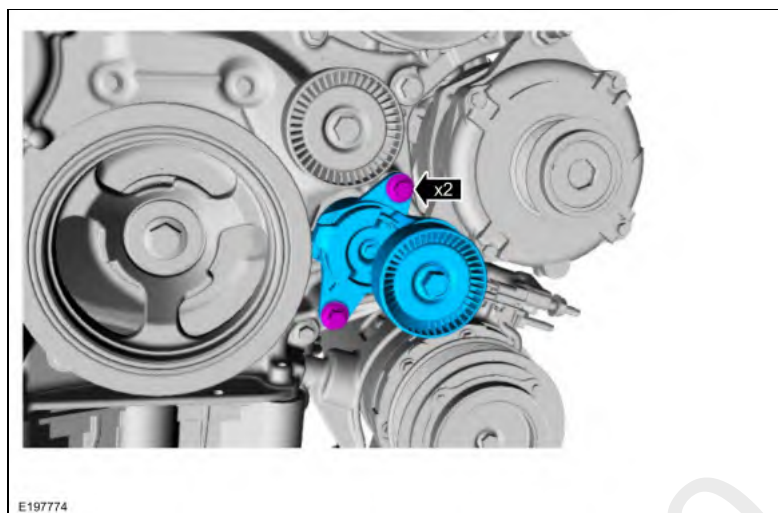

Installation

1. To install, reverse the removal procedure.
2. After installation, make sure the accessory drive belt is correctly seated on all pulleys.

