



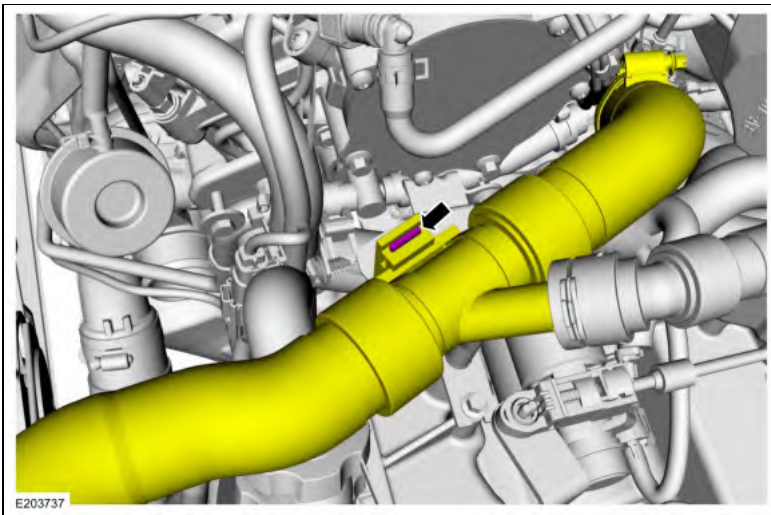

7. Remove the starter motor bracket nuts and then remove the starter motor bracket.
Torque: 17 lb.ft (23 Nm)

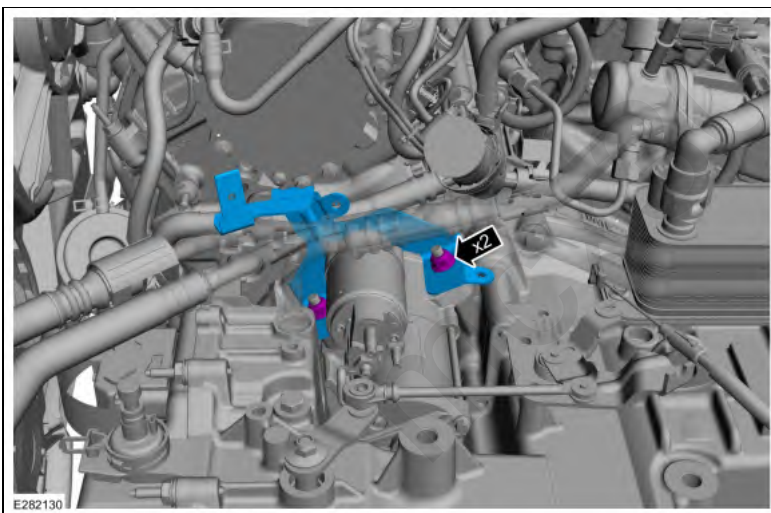

- 8.
1. Remove the cover from solenoid.
 2. Remove the starter motor solenoid battery cable nut and then disconnect the starter motor solenoid battery cable.
Torque: 106 lb.in (12 Nm)
 3. Remove the starter motor solenoid wire nut and then disconnect the starter solenoid wire.
Torque: 53 lb.in (6 Nm)