



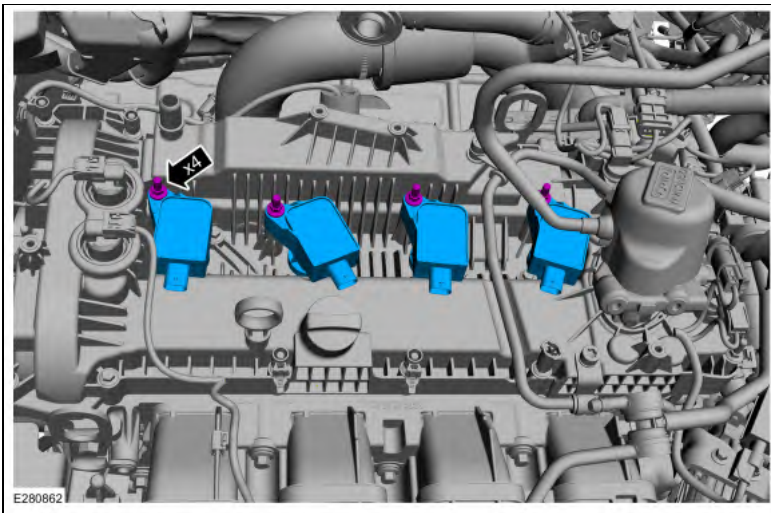

5. Inspect the ignition coil-on-plug assembly for cracks, rips or tears. Replace any damaged coil-on-plug assemblies.

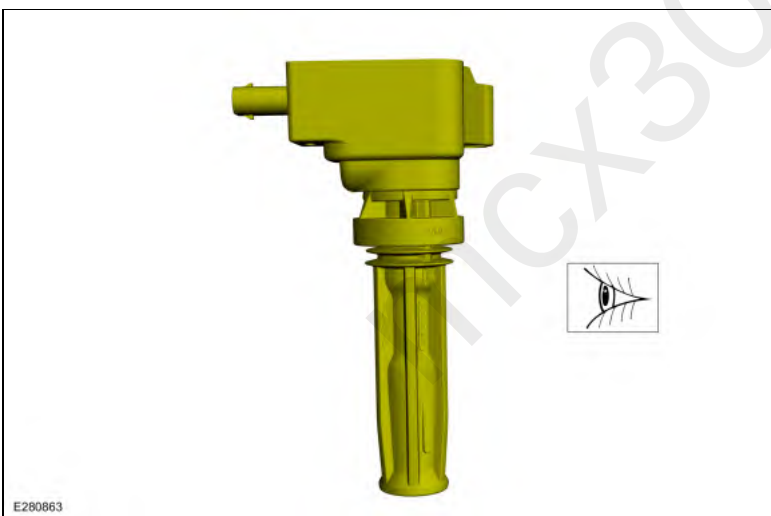

Installation

- NOTE:** When installing the ignition coil into cylinder 4, carefully rotate the coil anti-clockwise 90° and lower it into the cylinder head.

Install the ignition coil-on-plug assemblies, then install and tighten the ignition coil-on-plug retainers.
Torque: 71 lb.in (8 Nm)