


Ignition Coil-On-Plug

Removal


Both sides

1. Remove the engine appearance cover retainers and then remove the engine appearance cover.

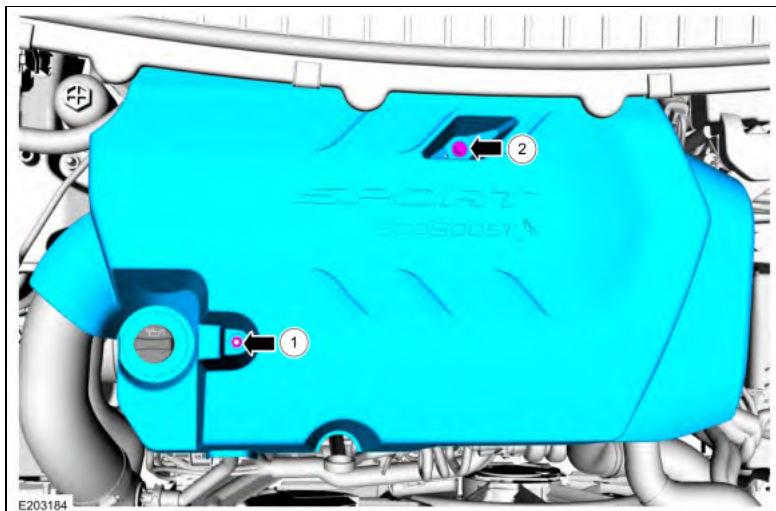

Left side

2. Disconnect the quick release couplings.
Refer to: Quick Release Coupling (310-00 Fuel System - General Information - 2.7L EcoBoost (238kW/324PS)) .

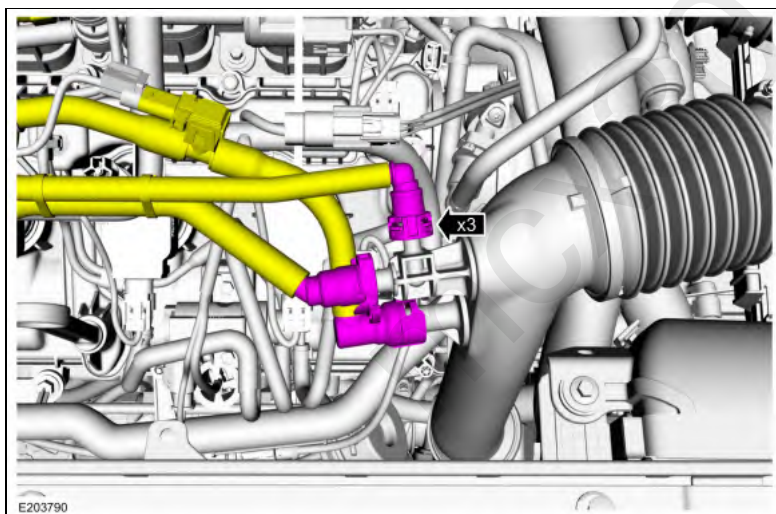

3. Release the electrical harness retainers from the ignition coil-on-plug studbolts. Disconnect the ignition coil-on-plug electrical connectors.