


Exhaust Gas Recirculation (EGR) Coolant Outlet Temperature Sensor

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Remove the differential pressure feedback EGR sensor.
Refer to: Differential Pressure Feedback Exhaust Gas Recirculation (EGR) Sensor (303-08A Engine Emission Control - 2.0L EcoBoost (184kW/250PS) â€“ MI4, Removal and Installation).
2. Disconnect the electrical connector.

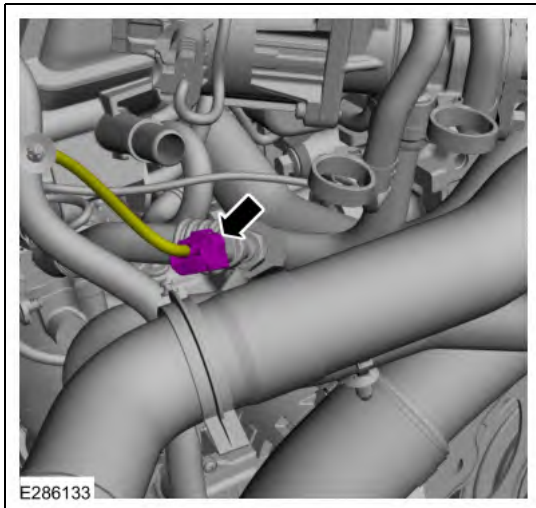


3. **NOTE:** When removing the sensor, use a suitable spanner on both the sensor body and the sensor mounting boss, to prevent the removal force from damaging the EGR tube.

Remove the EGR coolant outlet temperature sensor.

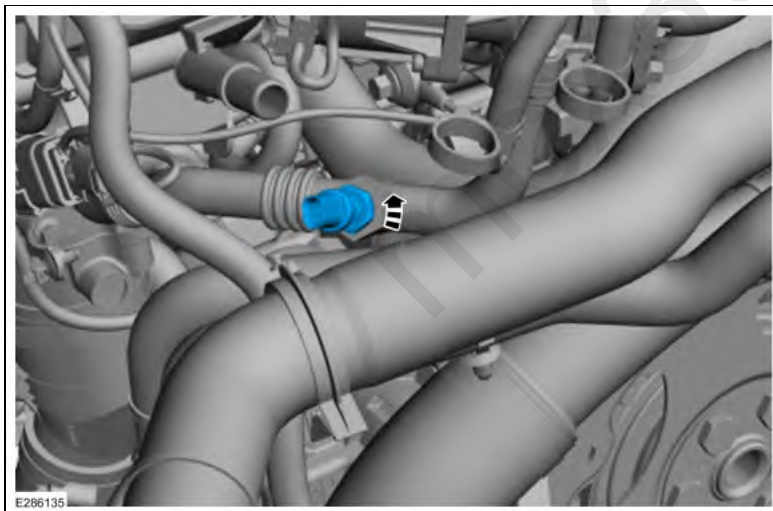

4. Lubricate the o-ring seal with clean engine oil. Replace the o-ring if necessary.

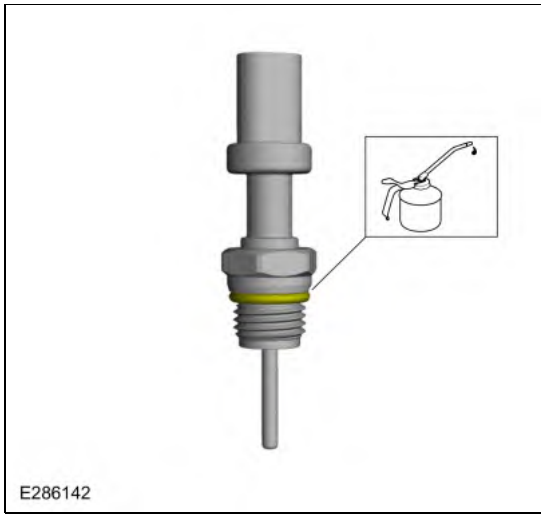

Installation

1. To install, reverse the removal procedure.

mcx30.com