

## Positive Crankcase Ventilation (PCV) Valve


### Removal

**NOTE:** Removal steps in this procedure may contain installation details.


1. Remove the engine appearance cover retainers and then remove the engine appearance cover.

Torque:

- 1: 42 lb.in (4.8 Nm)
- 2: 97 lb.in (11 Nm)

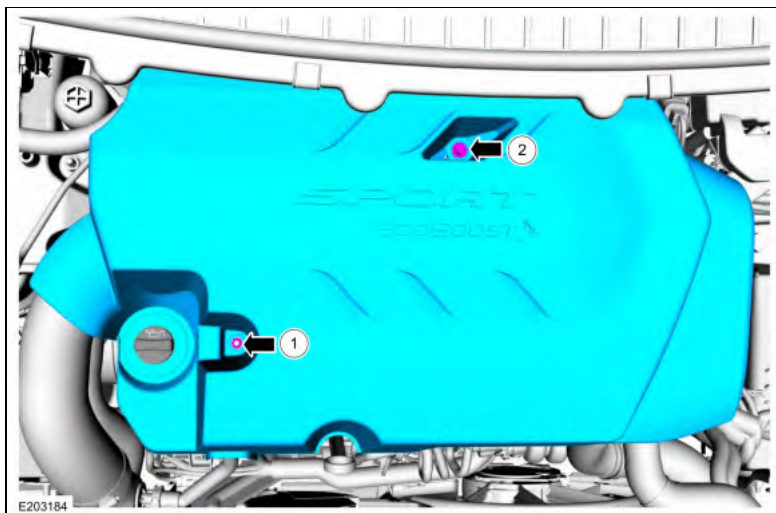

2. Disconnect the PCV valve quick release coupling.  
Refer to: Quick Release Coupling (310-00 Fuel System - General Information - 2.7L EcoBoost (238kW/324PS)) .

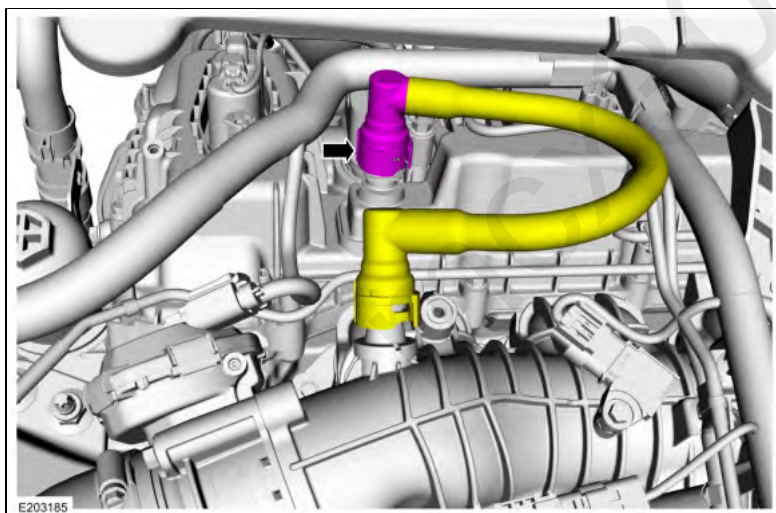

3. **NOTICE:** A new PCV valve must be installed if removed from the valve cover. Damage will occur to the locking mechanism on the PCV valve.  
Rotate the PCV valve counterclockwise, then remove and discard the PCV valve.