

Intake Air Distribution and Filtering

Diagnostics in this manual assume a certain skill level and knowledge of Ford-specific diagnostic practices. For information about these, REFER to: Diagnostic Methods (100-00 General Information, Description and Operation).

For PCM DTC,

REFER to: Electronic Engine Controls - Component Location (303-14A Electronic Engine Controls - 2.0L EcoBoost (184kW/250PS) â€“ MI4, Description and Operation).

For driveability symptoms without DTC, Refer to Powertrain Control/Emissions Diagnosis (PC/ED) manual.. See Section 3, Symptom Charts.

mcx30.com