


Air Cleaner Outlet Pipe LH

Removal


NOTICE: The turbocharger compressor vanes can be damaged by even the smallest particles. When removing any turbocharger or engine air intake system component, ensure that no debris enters the system. Failure to do so may result in damage to the turbocharger.

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the air cleaner.
Refer to: Air Cleaner (303-12B Intake Air Distribution and Filtering - 2.7L EcoBoost (238kW/324PS), Removal and Installation).
2. Disconnect the vent tubes from the LH air cleaner outlet pipe.
Refer to: Quick Release Coupling (310-00 Fuel System - General Information - 2.7L EcoBoost (238kW/324PS)) .

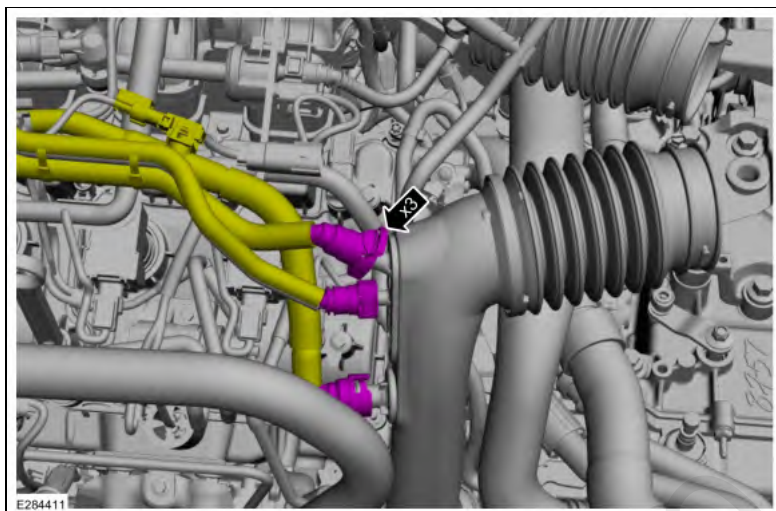

3. Detach wiring harness retainer and remove the stud bolt.
Torque: 53 lb.in (6 Nm)

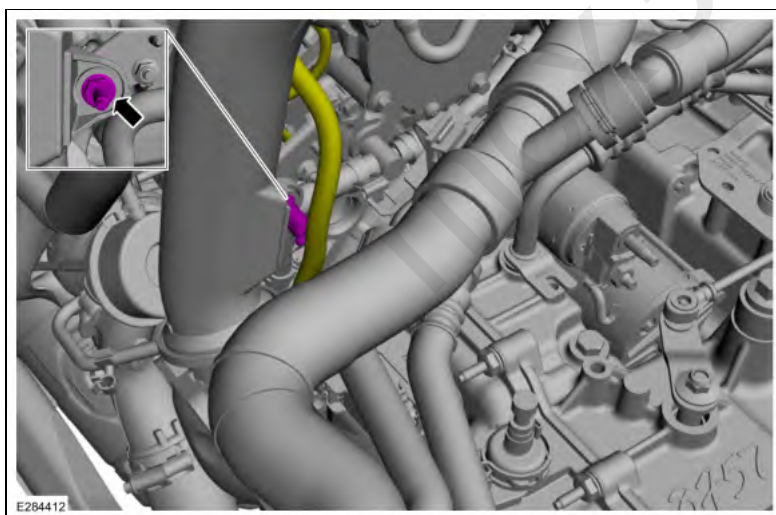

4. Loosen the clamp and disconnect the CAC intake pipe from the turbocharger.
Torque: 44 lb.in (5 Nm)