


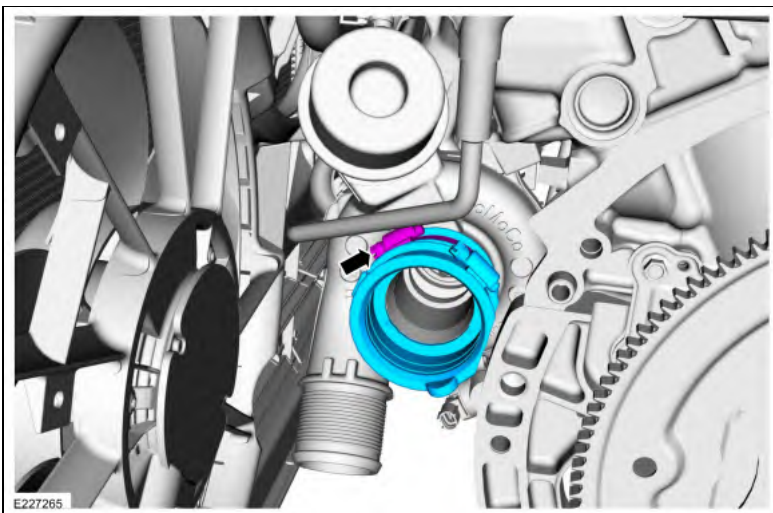

Installation

1. Inspect the turbocharger or engine air intake system components and clean, if necessary.
2. To install, reverse the removal procedure.


Air Cleaner Outlet Pipe RH

Removal

NOTICE: The turbocharger compressor vanes can be damaged by even the smallest particles. When removing any turbocharger or engine air intake system component, ensure that no debris enters the system. Failure to do so may result in damage to the turbocharger.


NOTE: Removal steps in this procedure may contain installation details.

1.
 1. Remove the nut.
Torque: 42 lb.in (4.8 Nm)
 2. Remove the bolt and the engine appearance cover.
Torque: 93 lb.in (10.5 Nm)

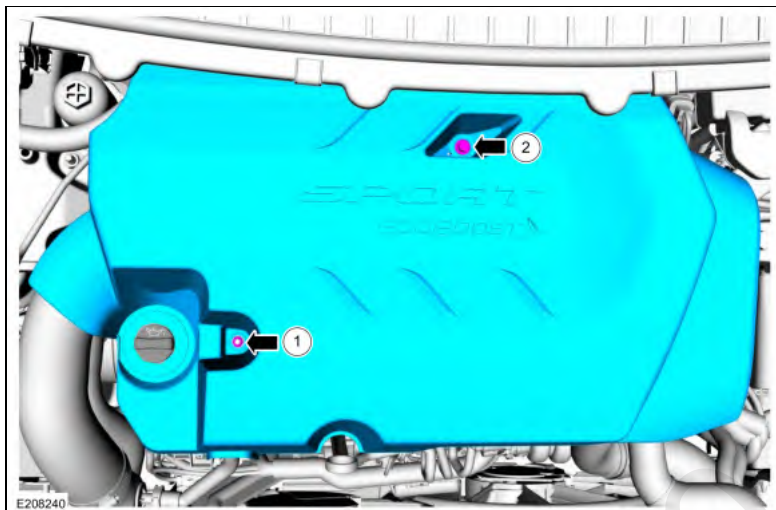

Upper air cleaner outlet pipe

2.
 - Detach the retainer and position aside the wiring harness.
 - Loosen the clamps and remove the upper air cleaner outlet pipe.
Torque: 42 lb.in (4.8 Nm)

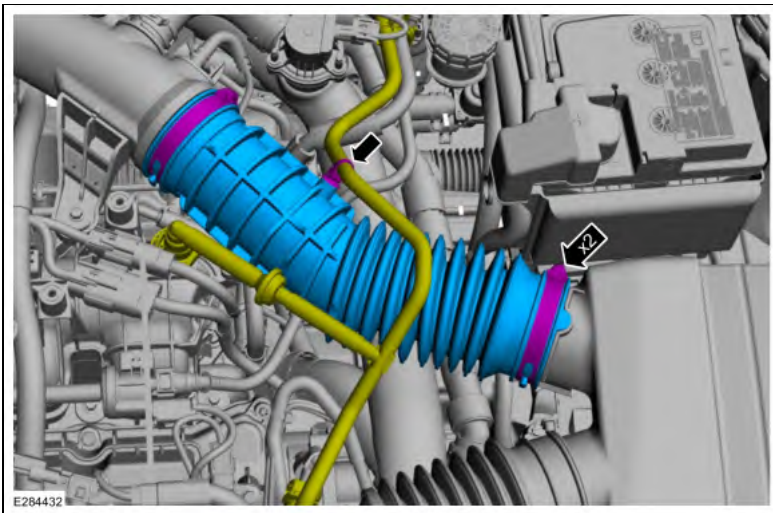

Lower air cleaner outlet pipe

3. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
4. Loosen the clamps and disconnect the tube connections. Remove the bolt and the lower air cleaner outlet pipe.
Torque:
Clamps: 42 lb.in (4.8 Nm)
Bolt: 71 lb.in (8.0 Nm)