

Engine Oil Level Sensor


Special Tool(s) / General Equipment

Oil Drain Equipment


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Remove the retainers and the underbody shield.

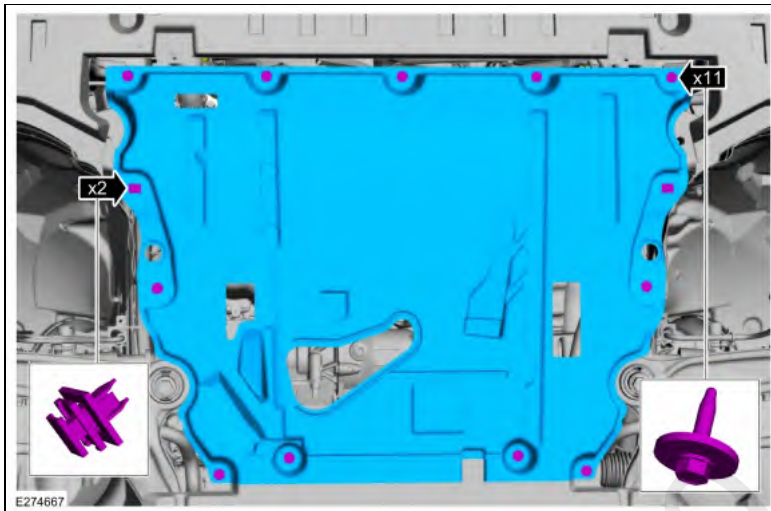

3.
 - Remove the oil pan drain bolt and drain the engine oil.
Use the General Equipment: Oil Drain Equipment
 - Install the oil pan drain bolt.
Torque: 20 lb.ft (27 Nm)

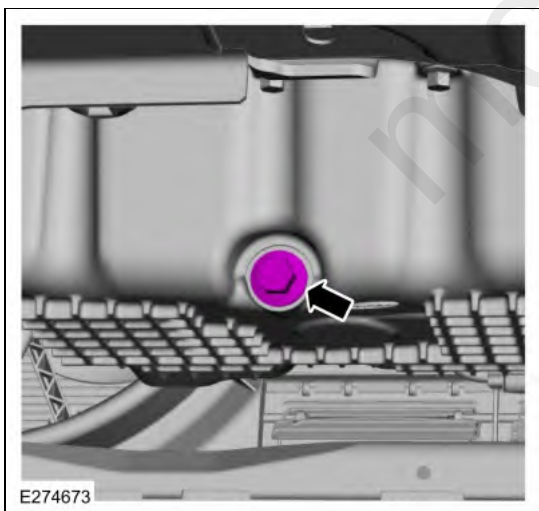

4. Disconnect the electrical connector. Remove the bolt and the engine oil level sensor.

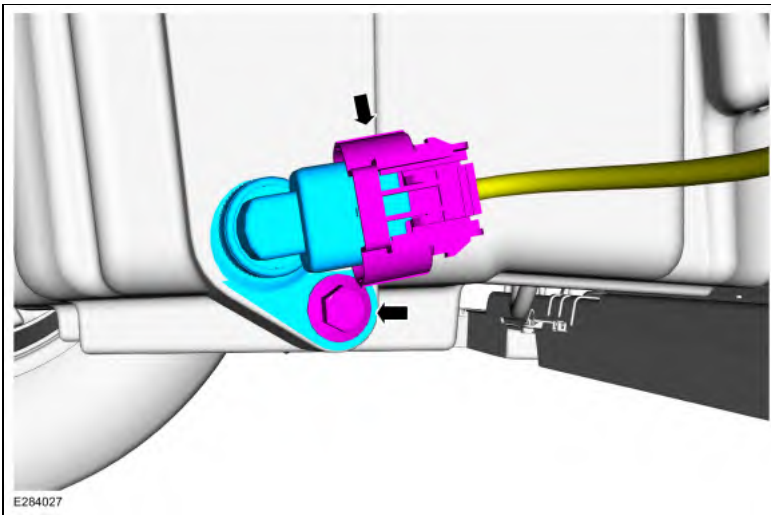

Installation

1. To install, reverse the removal procedure.
2. Fill the engine with clean engine oil.
Refer to: Specifications (303-01A Engine - 2.0L EcoBoost (184kW/250PS) â€™ MI4, Specifications).

