


Boost Pressure Sensor


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Remove the retainers and the front underbody shield.

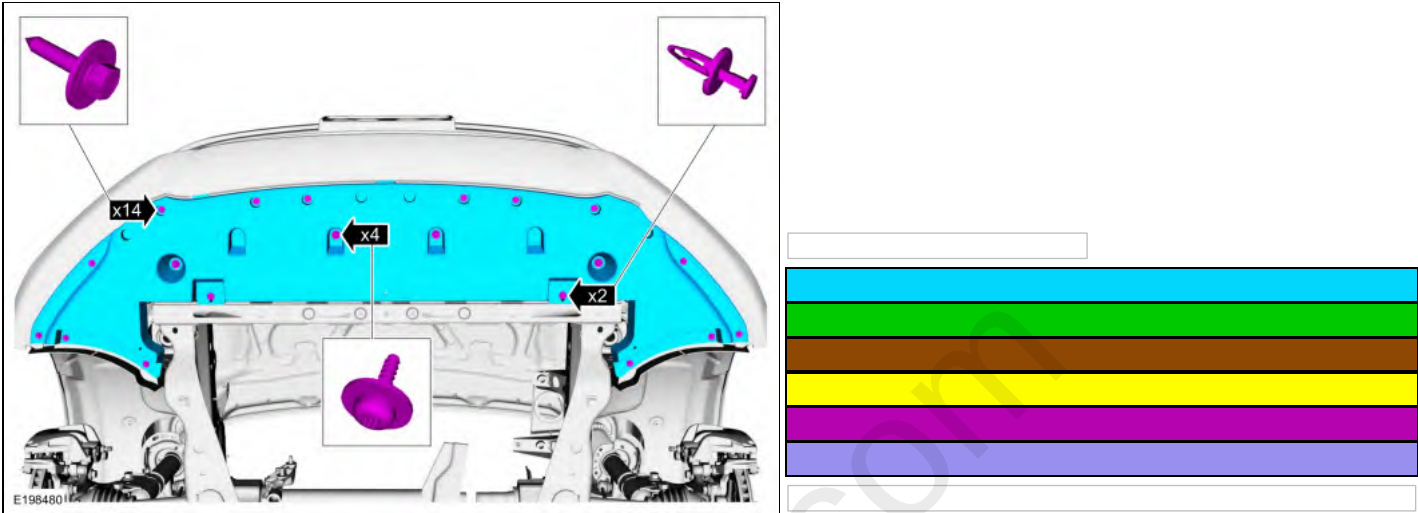

3. Disconnect the electrical connector, remove retainer and the turbocharger boost pressure sensor.
Torque: 44 lb.in (5.0 Nm)

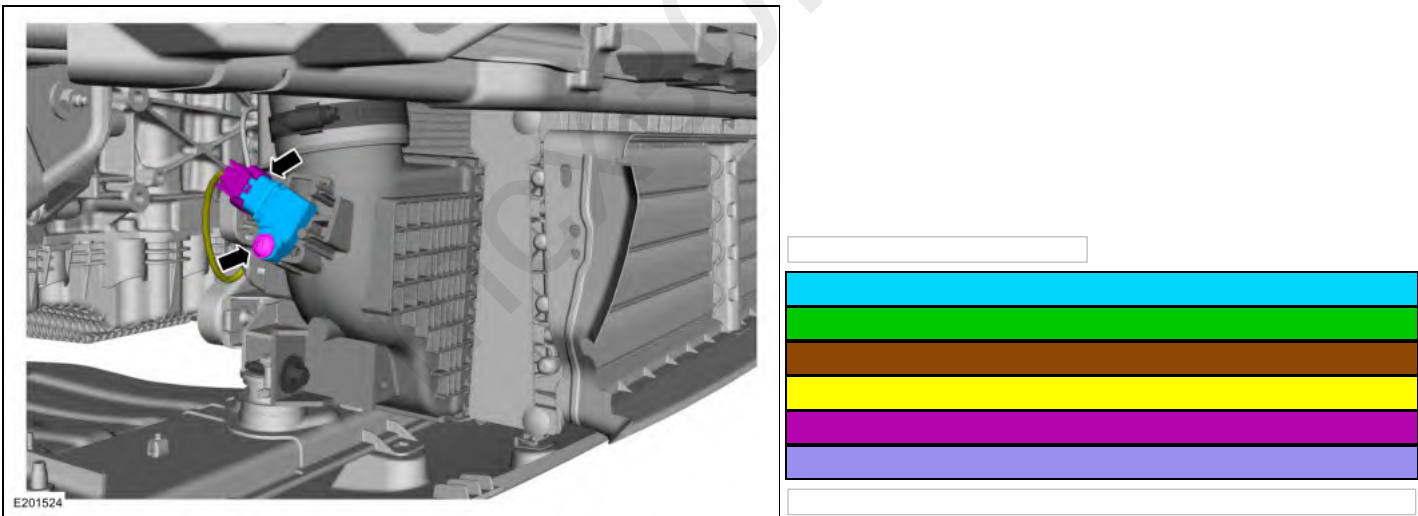

Installation

1. To install, reverse the removal procedure.

