


Variable Camshaft Timing (VCT) Oil Control Solenoid

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the valve cover.
Refer to: Valve Cover (303-01A Engine - 2.0L EcoBoost (184kW/250PS) â€“ MI4, Removal and Installation).
2. Remove the bolts and the VCT oil control solenoids.
Torque: 97 lb.in (11 Nm)

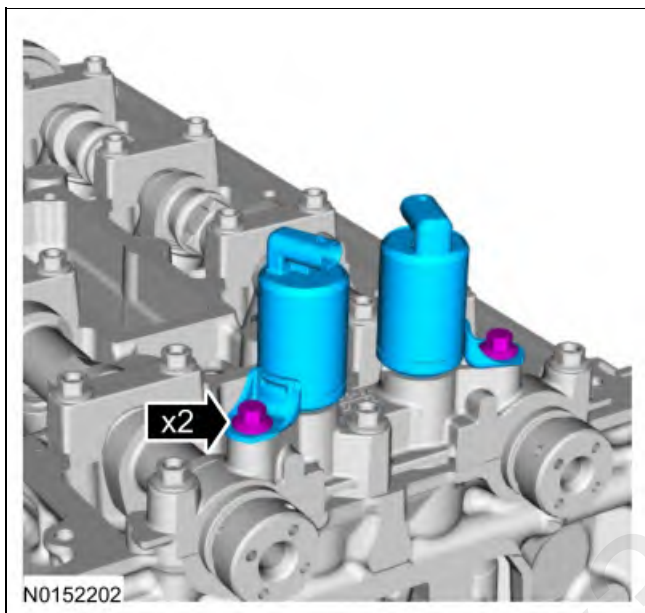

Installation

1. To install, reverse the removal procedure.

303-14B Electronic Engine Controls - 2.7L EcoBoost (238kW|324PS)