



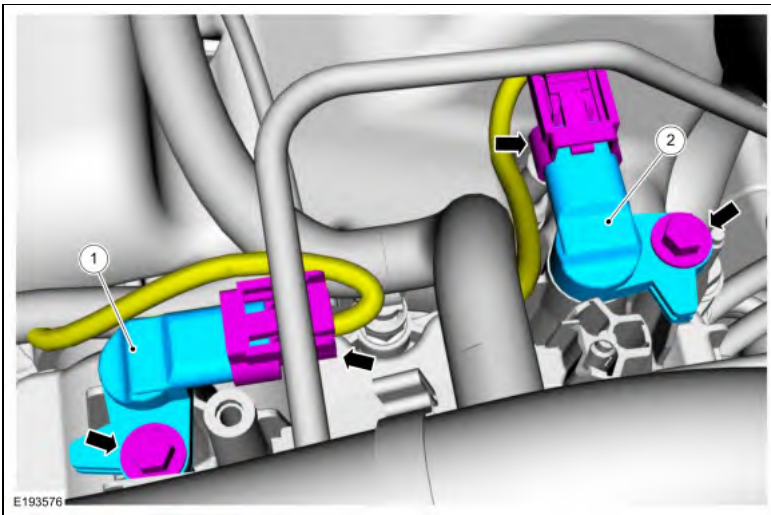

LH (left-hand) Camshaft Position (CMP) Sensors

5.
 - Remove the nut.
Torque: 42 lb.in (4.8 Nm)
 - Remove the bolt and remove the engine appearance cover.
Torque: 93 lb.in (10.5 Nm)

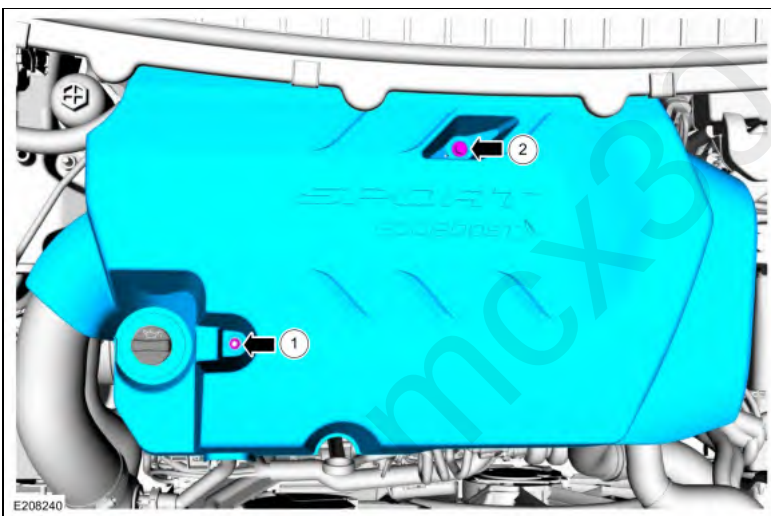

6.
 - Disconnect the intake CMP sensor electrical connector.
 - Disconnect the exhaust CMP sensor electrical connector.