


Manifold Absolute Pressure (MAP) Sensor


Removal

NOTE: Removal steps in this procedure may contain installation details.

1.
 - Remove the oil filler cap.
 - Remove the nut and bolt and remove the engine appearance cover.
Torque: 42 lb.in (4.8 Nm)

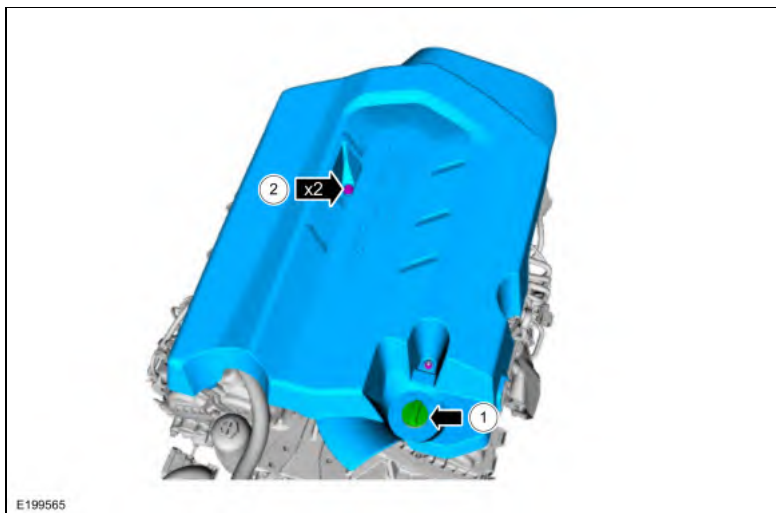

2. Disconnect the electrical connector, remove the retainers and the MAP sensor.
Torque: 53 lb.in (6 Nm)

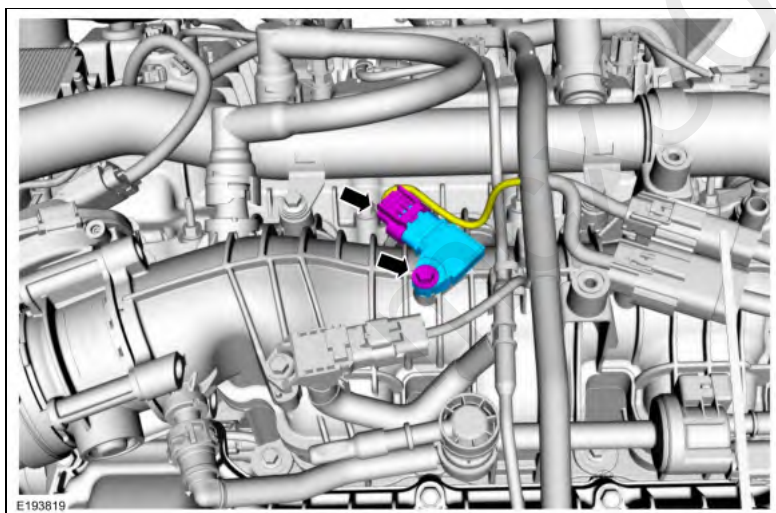

Installation

1. To install, reverse the removal procedure.