


Turbocharger Bypass Valve


Removal

NOTE: Removal steps in this procedure may contain installation details.



1.
 - Remove the oil filler cap.
 - Remove the nut and bolt and remove the engine appearance cover.
Torque: 42 lb.in (4.8 Nm)

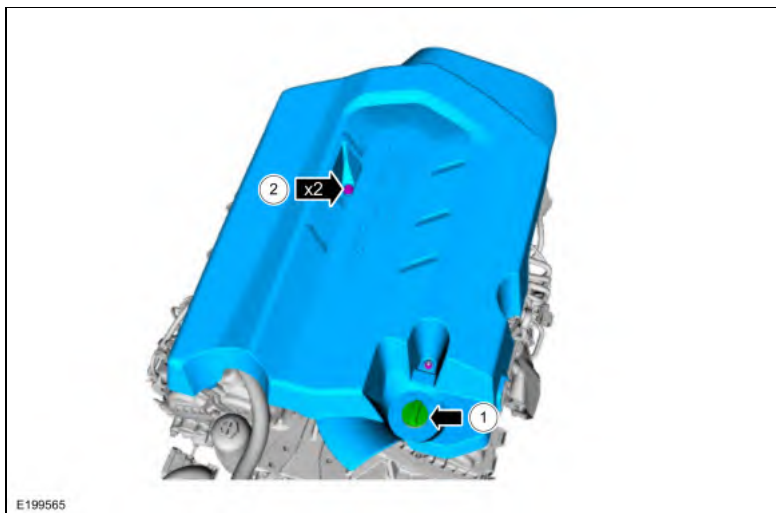

2. Disconnect the turbocharger bypass valve electrical connector, and remove harness from mounting stud.

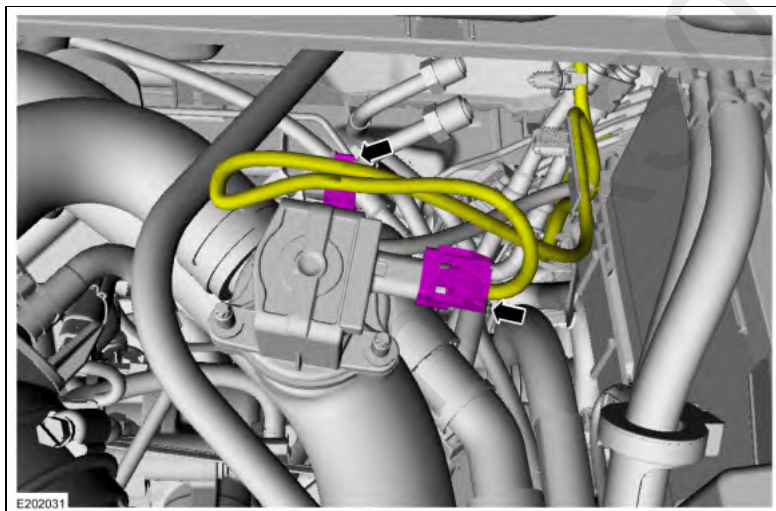

 3. Remove the retainers and the turbocharger bypass valve.
Torque: 62 lb.in (7 Nm)

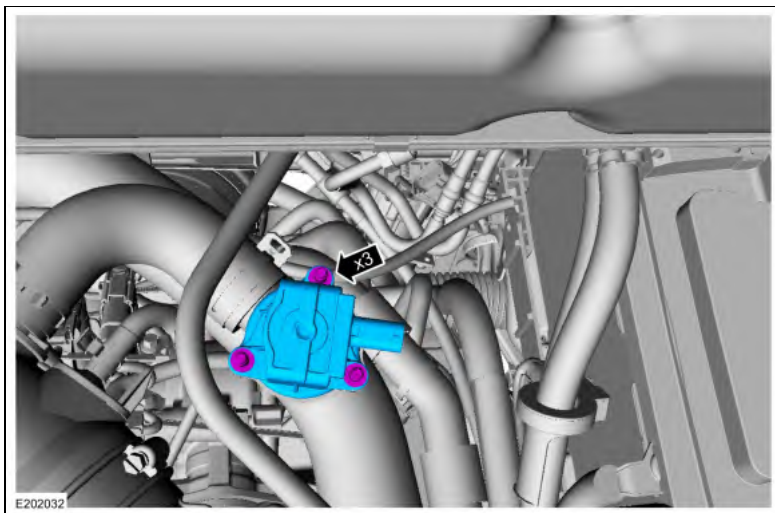

Installation

1. To install, reverse the removal procedure.

mcx30.com