



4. Disconnect and position the brake vacuum tube assembly aside.

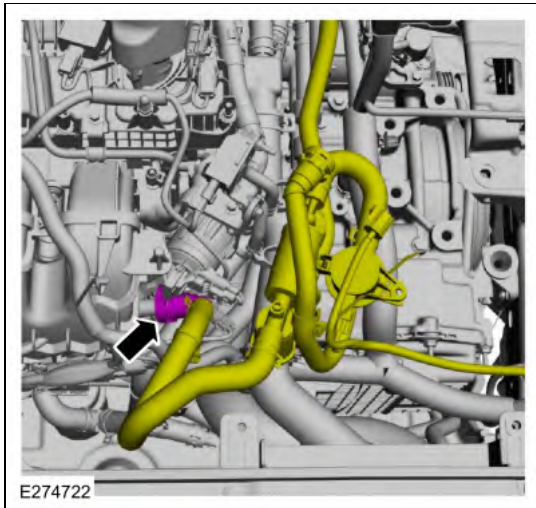

5. Remove the nut, bolt and the battery tray support bracket.

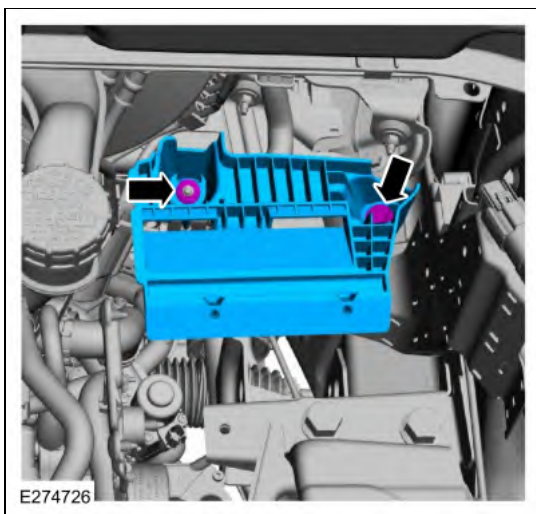

6. Remove the nuts and position the coolant valve and hoses aside and secure.