


Transmission Internal Wiring Harness Frame


Removal

1. Remove the main control cover.
Refer to: Main Control Cover (307-01A Automatic Transmission - 8-Speed Automatic Transmission â€“ 8F35/8F40, Removal and Installation).
2. Disconnect the TR sensor electrical connector, disconnect the OSS sensor electrical connector, disconnect the connectors from the solenoids, remove the bolts and the wiring harness frame.

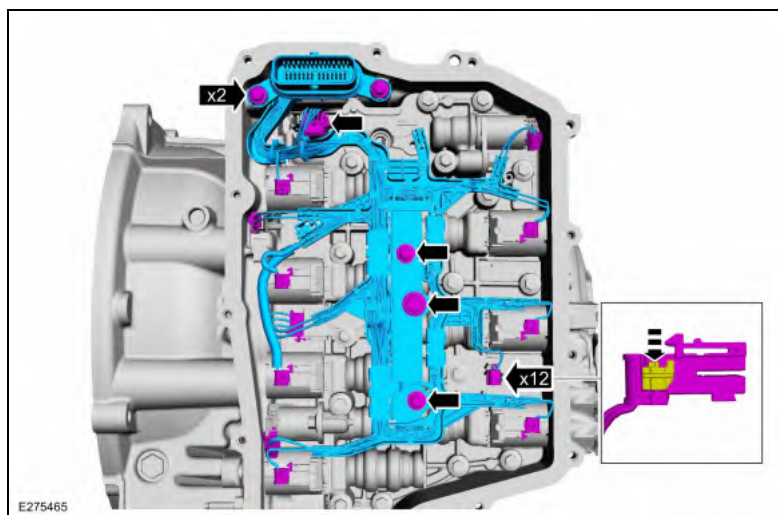

Installation

1. Connect the TR sensor electrical connector, connect the OSS sensor electrical connector, connect the connectors to the solenoids, install the bolts and the wiring harness frame.
 1. Torque: 89 lb.in (10 Nm)
 2. Torque:
Stage 1: 44 lb.in (5 Nm)
Stage 2: 62 lb.in (7 Nm)
 3. Torque: 71 lb.in (8 Nm)

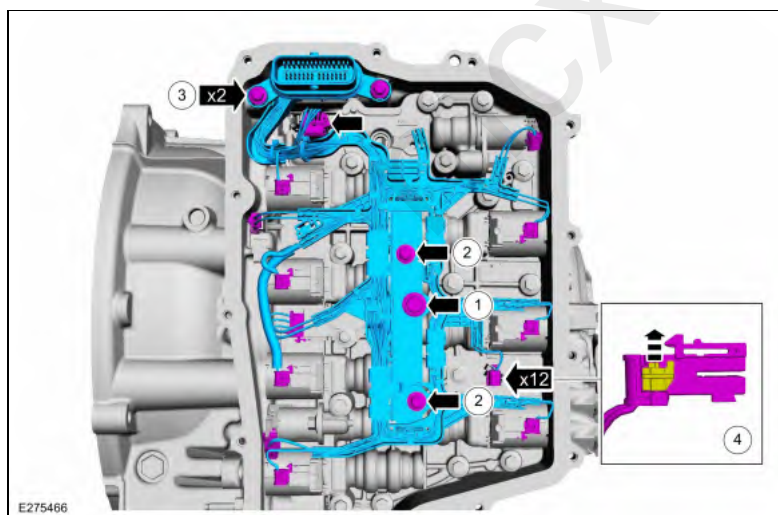

2. Install the main control cover.
Refer to: Main Control Cover (307-01A Automatic Transmission - 8-Speed Automatic Transmission â€“ 8F35/8F40, Removal and Installation).

