 
 


Transmission Case Reseal

Special Tool(s) / General Equipment

 E129694	100-001 (T50T-100-A) Slide Hammer
 E139373	100-002 (TOOL-4201-C) Holding Fixture with Dial Indicator Gauge
 E133913	205-153 (T80T-4000-W) Handle
	303-D020 (D80L-100-R) Collet, 7/8 to 1
 E142010	307-091 Handle, Torque Converter TKIT-2009TC-F
 17055	307-300 Gauge Bar, Shim Selection TKIT-1994-LMH/MH2 TKIT-1994-F TKIT-1994-FLM/FM
 307-346	307-346 (T97T-7902-A) Retainer, Torque Converter TKIT-1998-LM (NavigatoR) TKIT-1997-F/FLM/LT
	307-575 Converter Seal Installer TKIT-2006UF-FLM TKIT-2006UF-ROW
	307-585 Support seal installer TKIT-2006UF-FLM TKIT-2006UF-ROW
 E274929	307-758 Installer, Axle Seal -FWD
 E274945	307-773 Bench Mount Fixture
Puller	
Caliper Gauge	

Materials

Name	Specification
Motorcraft® Ultra Silicone Sealant TA-29	-
Motorcraft® MERCON® ULV Automatic Transmission Fluid XT-12-QULV	WSS-M2C949-A, MERCON® ULV

Repair

1. Remove the transmission.
Refer to: Transmission (307-01B Automatic Transmission - 8-Speed Automatic Transmission â€” 8F57, Removal and Installation).