
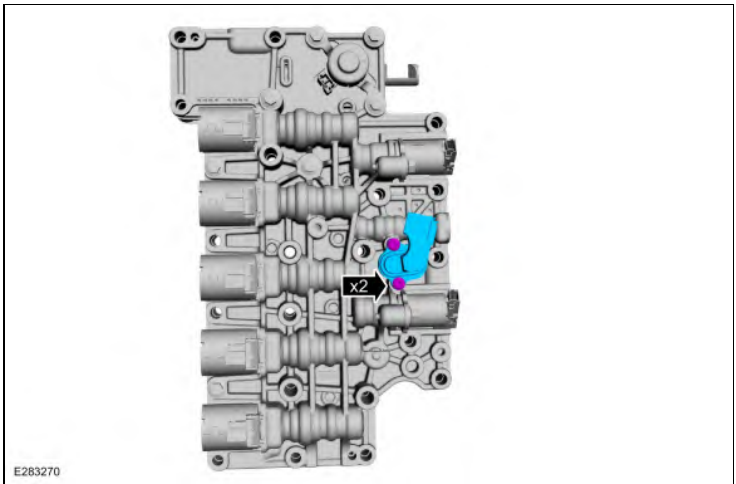


3. Remove the bolt and the TFT sensor.

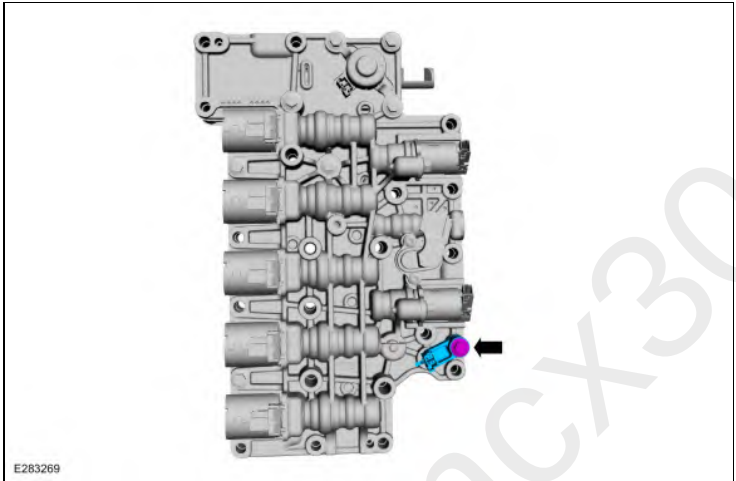

4. Remove the bolts and the park lock pawl solenoid.