




3. **NOTE:** *AWD shown, FWD similar.*

Using Step Plate 205-D015 and special tools, remove the left differential carrier bearing from the differential assembly.
Use Special Service Tool: 204-069 (T81P-1104-C) Remover/Installer, Front Wheel Hub.
Use the General Equipment: Bearing Separator

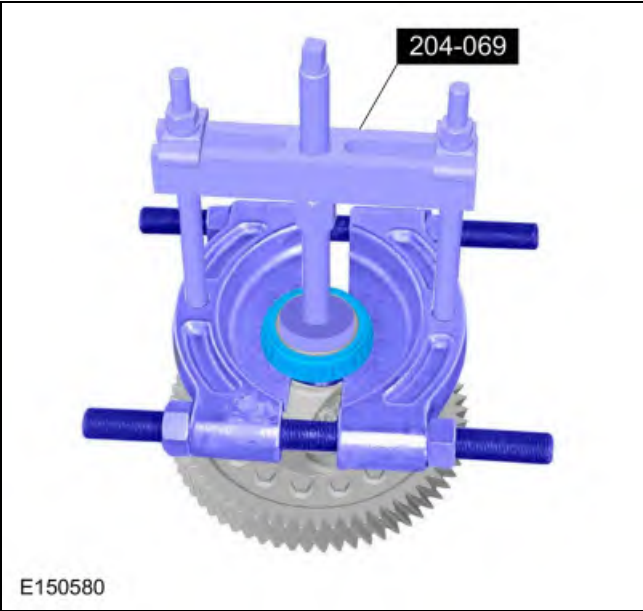