




4. **NOTE:** The brakes must be applied from the driver's seat while releasing the parking brake.

While applying the brakes, release the parking brake.

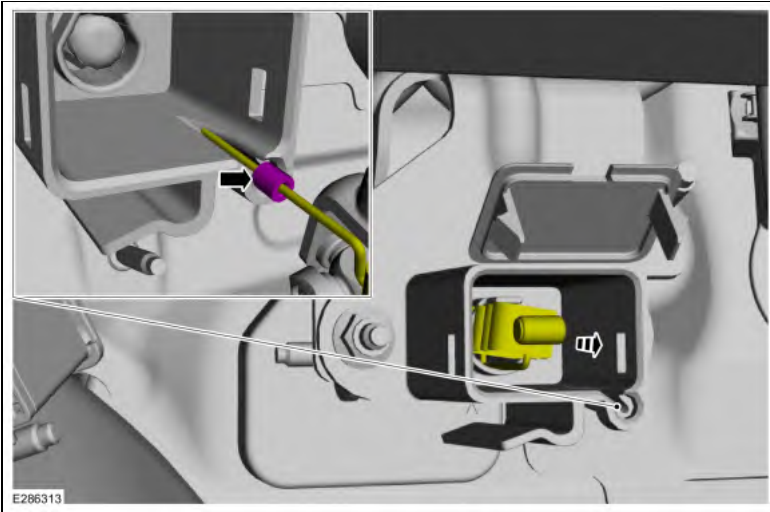

5. Disconnect the battery. The vehicle will remain in neutral for emergency towing purposes.
Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).