


Removal and Installation

Downshift Paddle Switch

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the driver airbag.
Refer to: Driver Airbag (501-20B Supplemental Restraint System, Removal and Installation).
2. Remove the downshift paddle switch.
 1. Disconnect the electrical connector.
 2. Remove the retainer and the downshift paddle switch.
Torque: 44 lb.in (5 Nm)

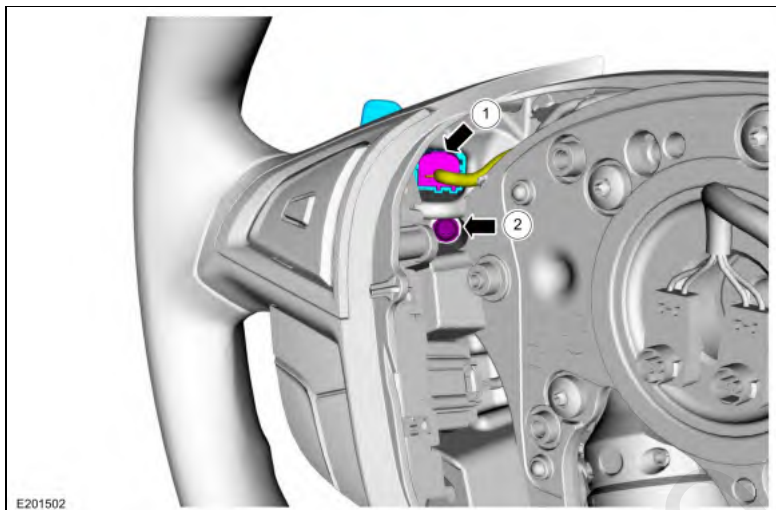

Installation

1. To install, reverse the removal procedure.