




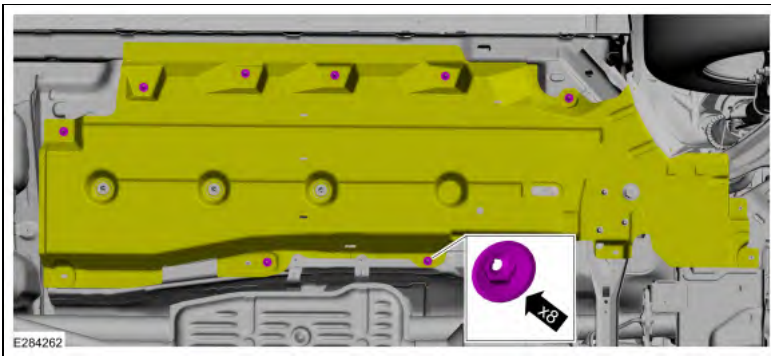

5. Remove the retainers and the floor pan under body RHshield.

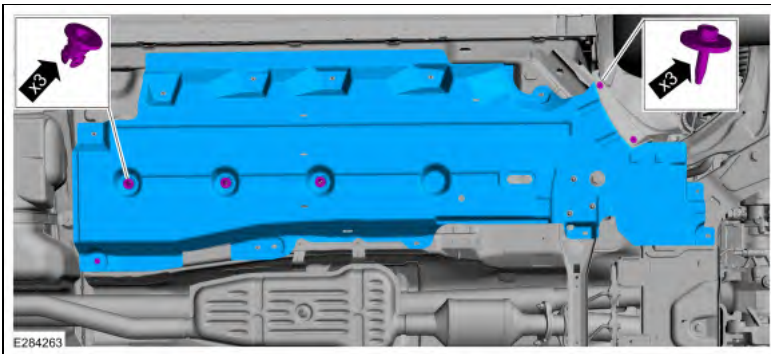

6. Remove the 4WD module from right side of the vehicle
1. Release tap from the connector cover.
 2. Disconnect the electrical connectors from 4WD module.

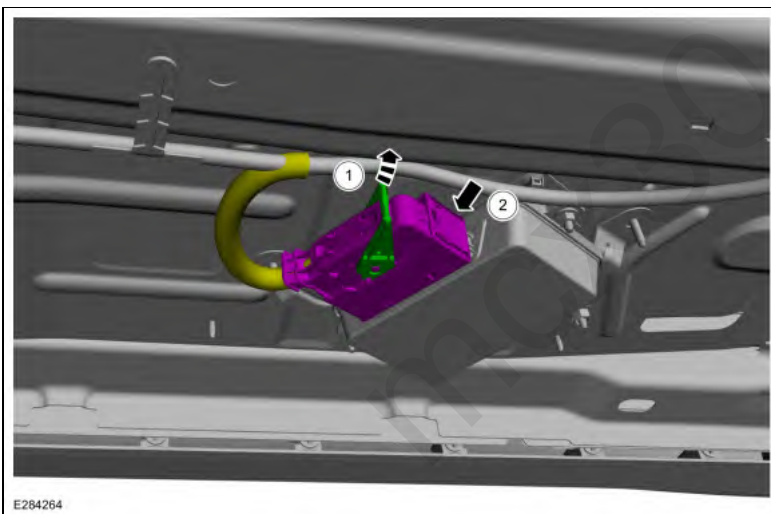

7. Remove the bolt and the AWD module.
Torque: 71 lb.in (8 Nm)