



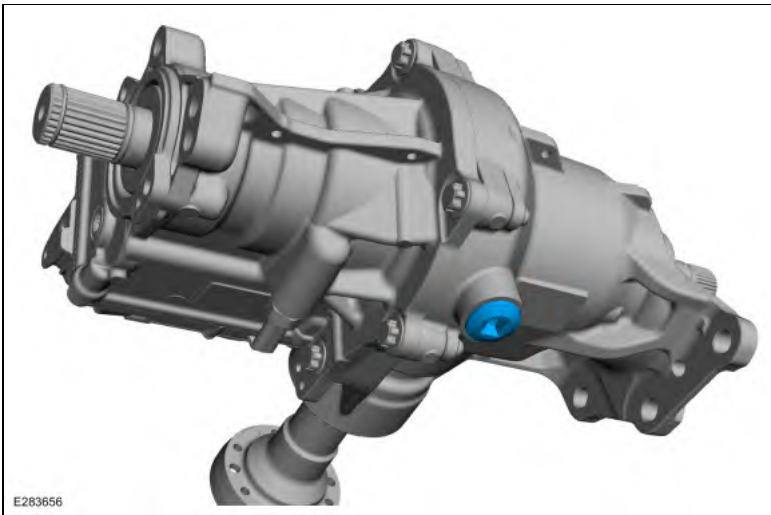

Vehicles with PTU Oil-to-Coolant Cooling

5.
 - Remove and discard the PTU cooler nuts.
 - **NOTE:** *Be prepared to catch escaping fluid.*
- Position aside the PTU cooler.

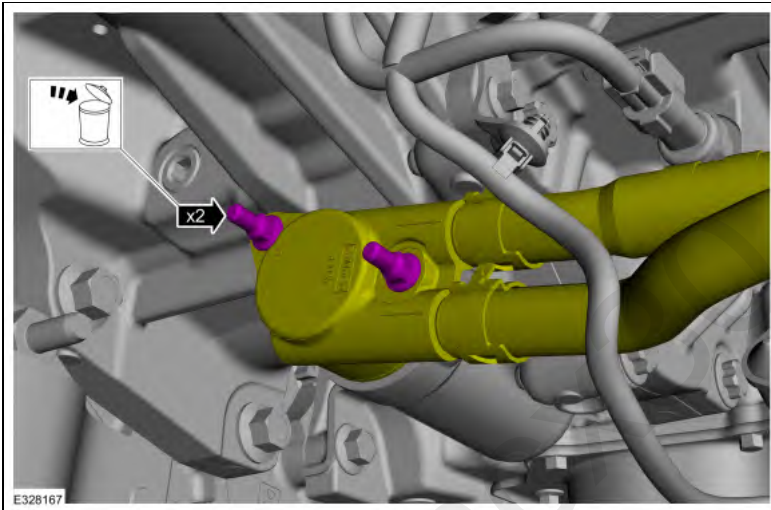

6.
 - Install the PTU cooler.
 - Install the PTU cooler nuts.
- Torque: 97 lb.in (11 Nm)*