
 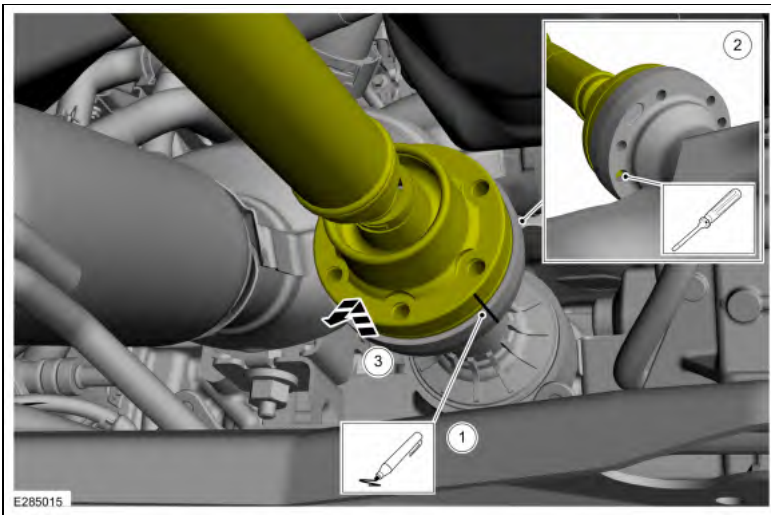



4. **NOTE:** This step is only necessary when installing a new PTU or replacing a PTU seal.

Drain the PTU.

Refer to: Power Transfer Unit Draining and Filling (308-07B Power Transfer Unit - 2.0L EcoBoost (184kW/250PS) â€” MI4, General Procedures).

5. Disconnect the auxillary pump connector and retainers.

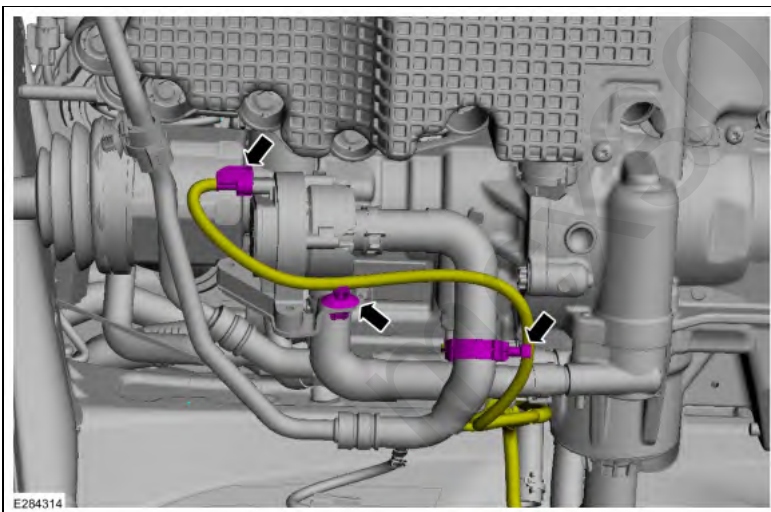

6. Disconnect the PTU motor connectors.