



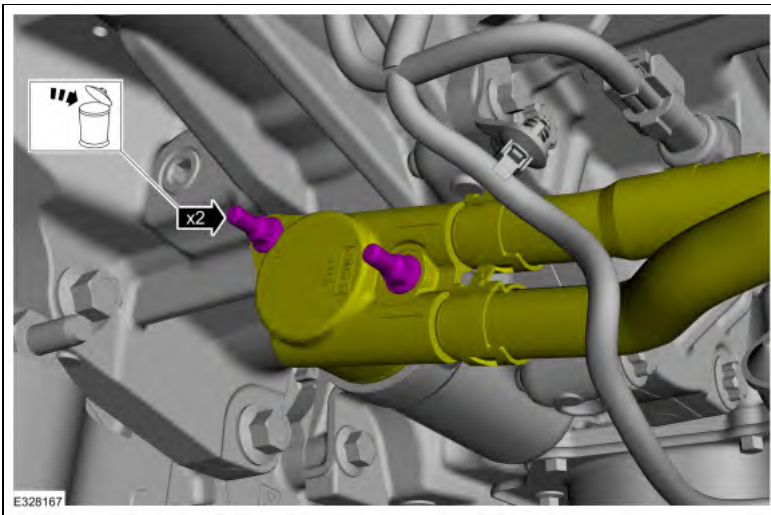

- 4.
- Install the PTU cooler.
 - Install the PTU cooler nuts.
- Torque: 97 lb.in (11 Nm)*

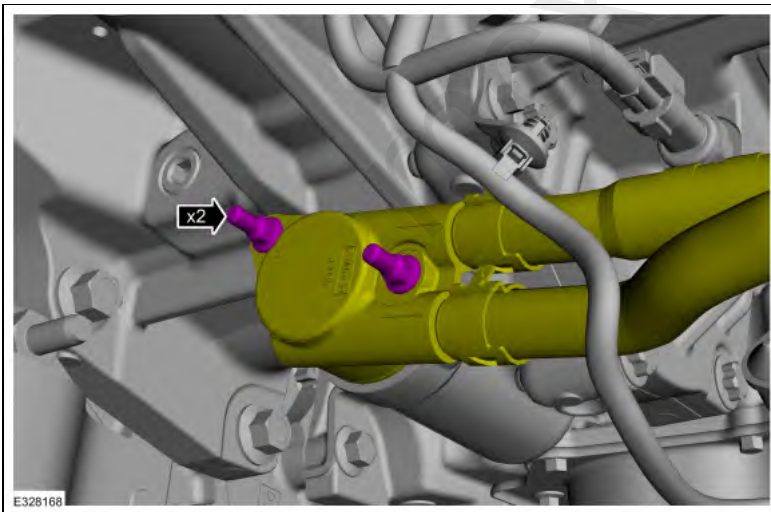

Filling

1. Remove the PTU fill plug.